



Dihedral break is slit up to 1" from the ends, on the bottom.  
The center is propped up 1", and the gap is glued. The glue joint is taped over when cured. Hot glue, PU, or epoxy should work fine.

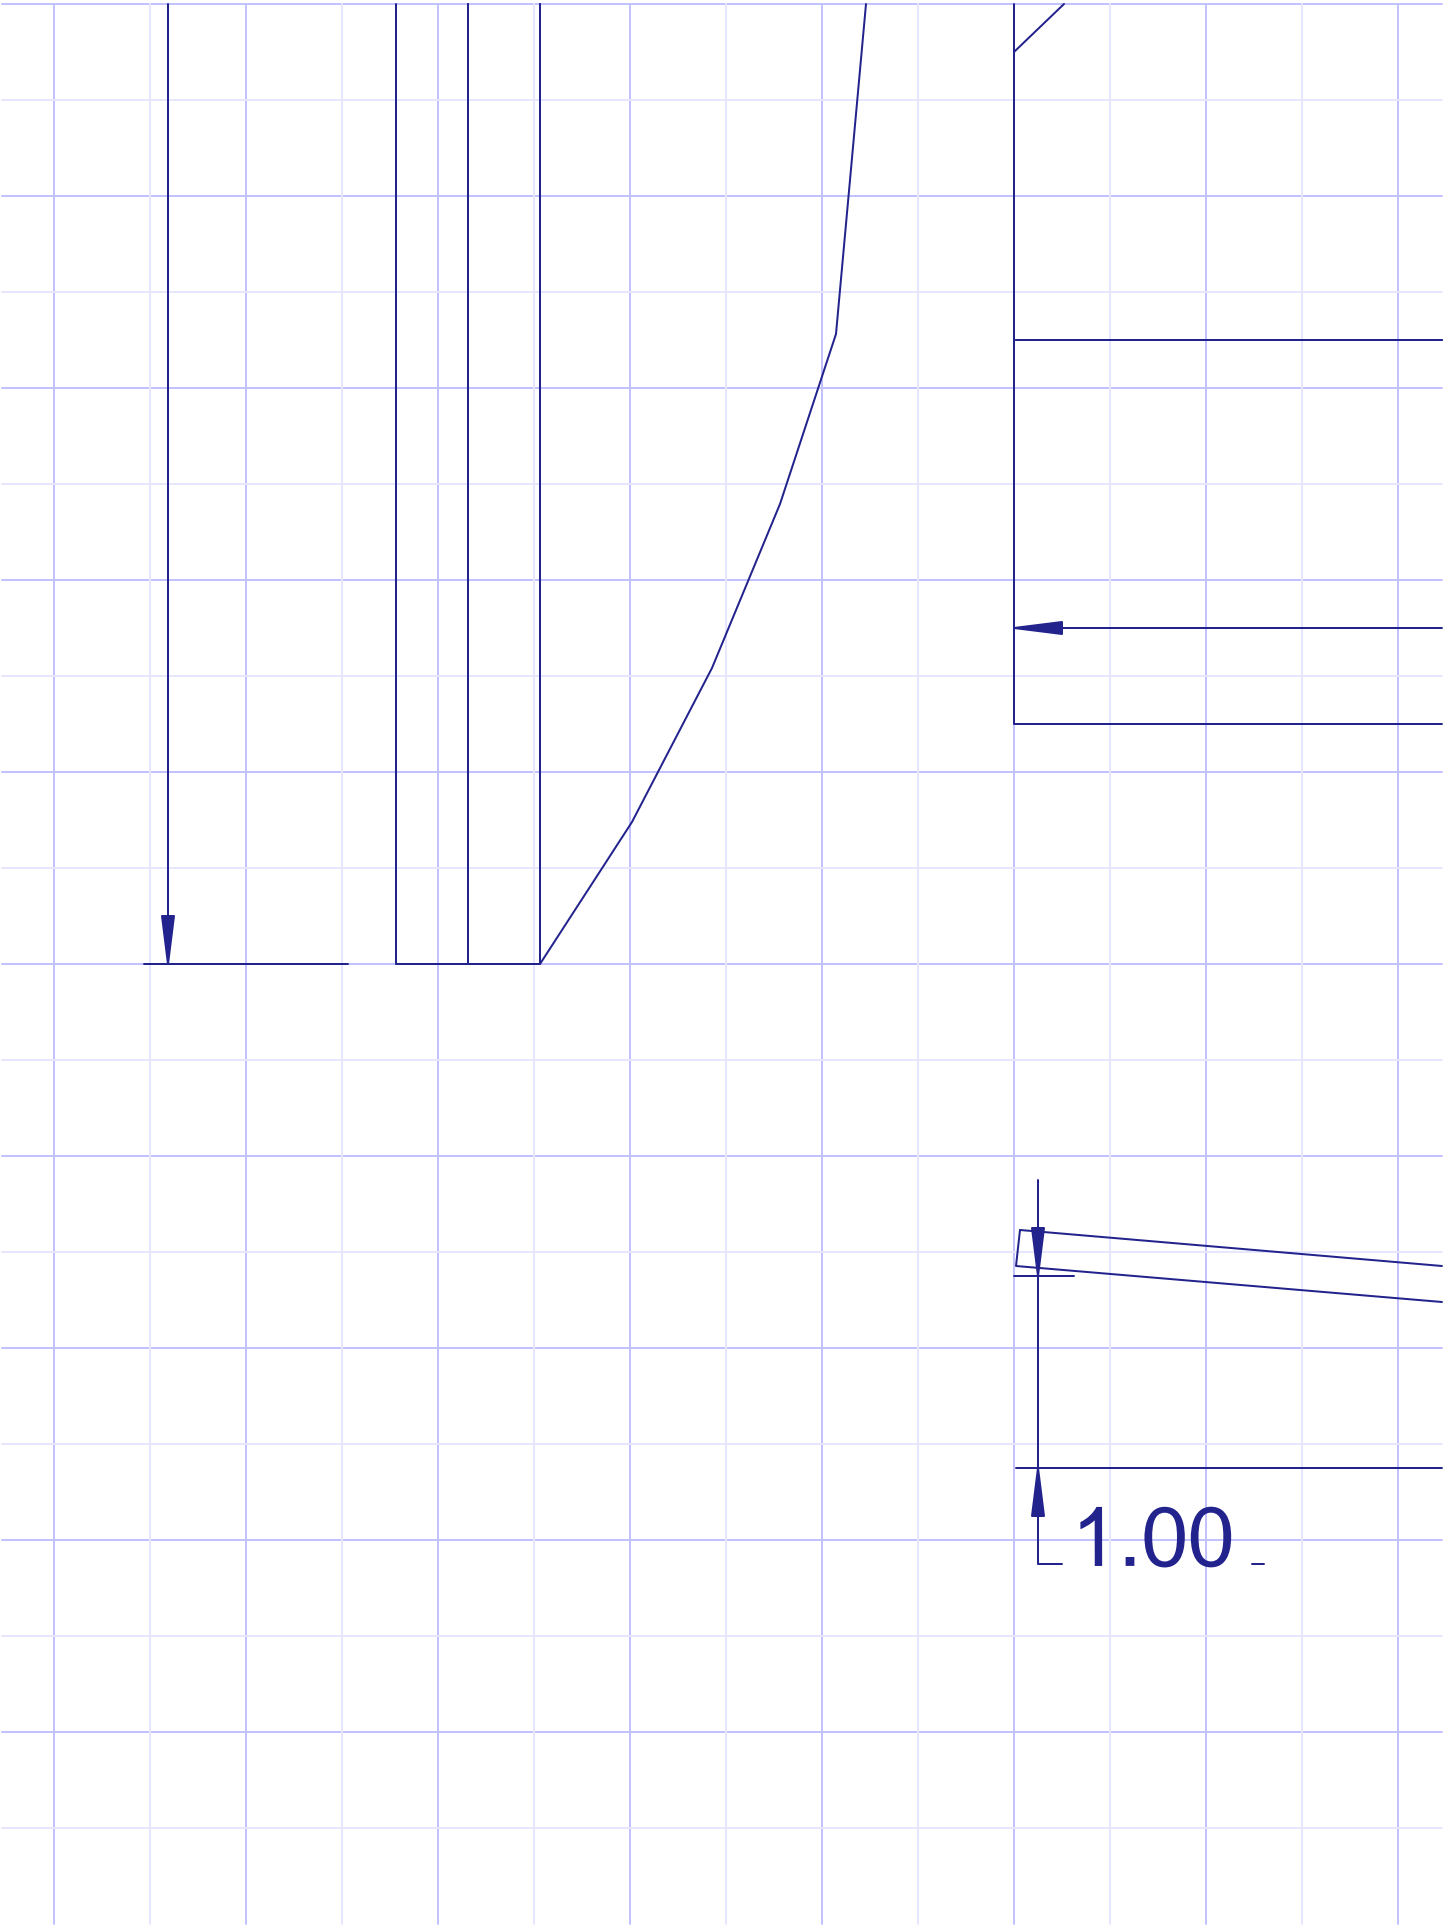





8.00

Dihedral bracket  
The center of the  
joint is tapered  
work fine.

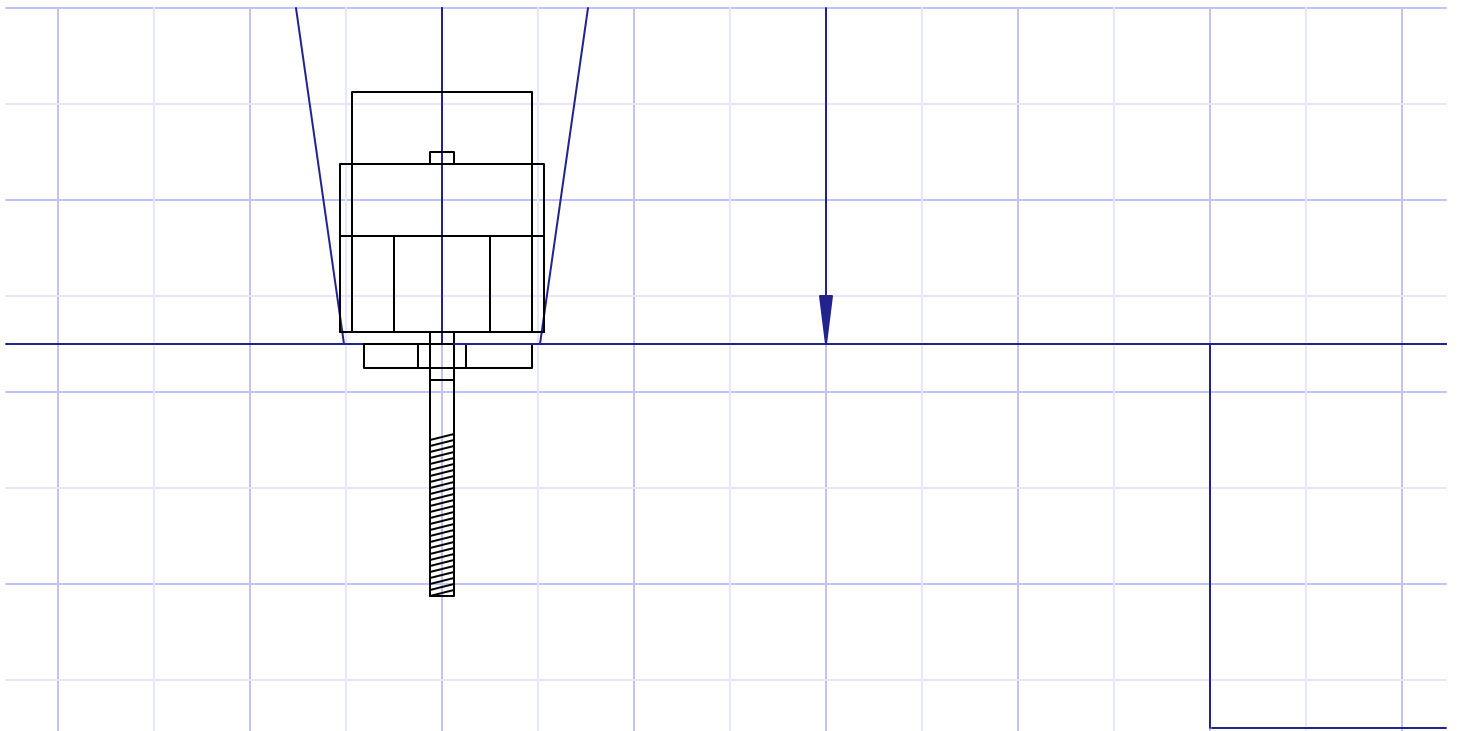

The crack is slit up to 1" from the ends, on the  
 sides propped up 1", and the gap is glued.  
 Covered over when cured. Hot glue, PU, or ep

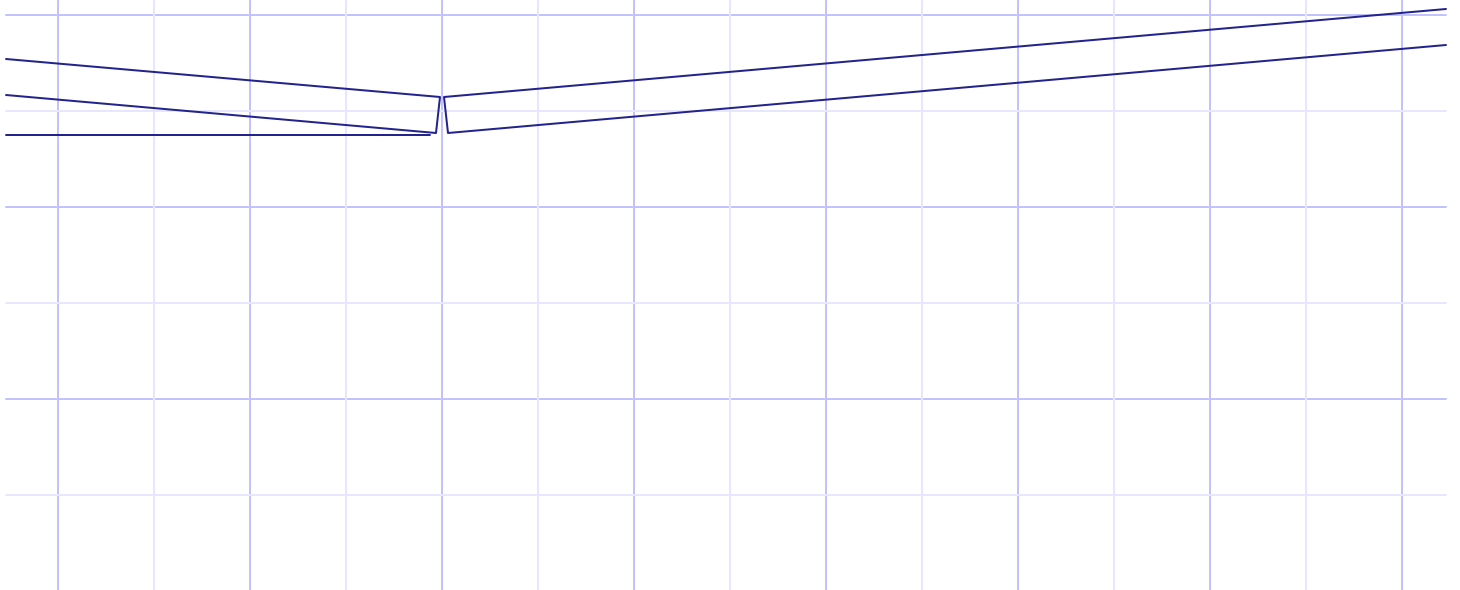

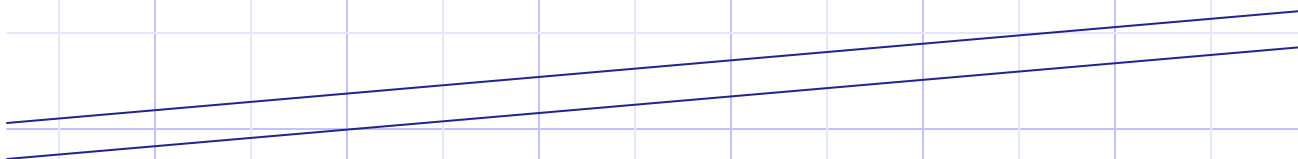

0

.

2

2


Skewer





Adapted by JETBEAR  
Documented by Gene Bond


6

The motor shown  
DCM-189 in a -  
box. A 7x5E AF  
works well on 29

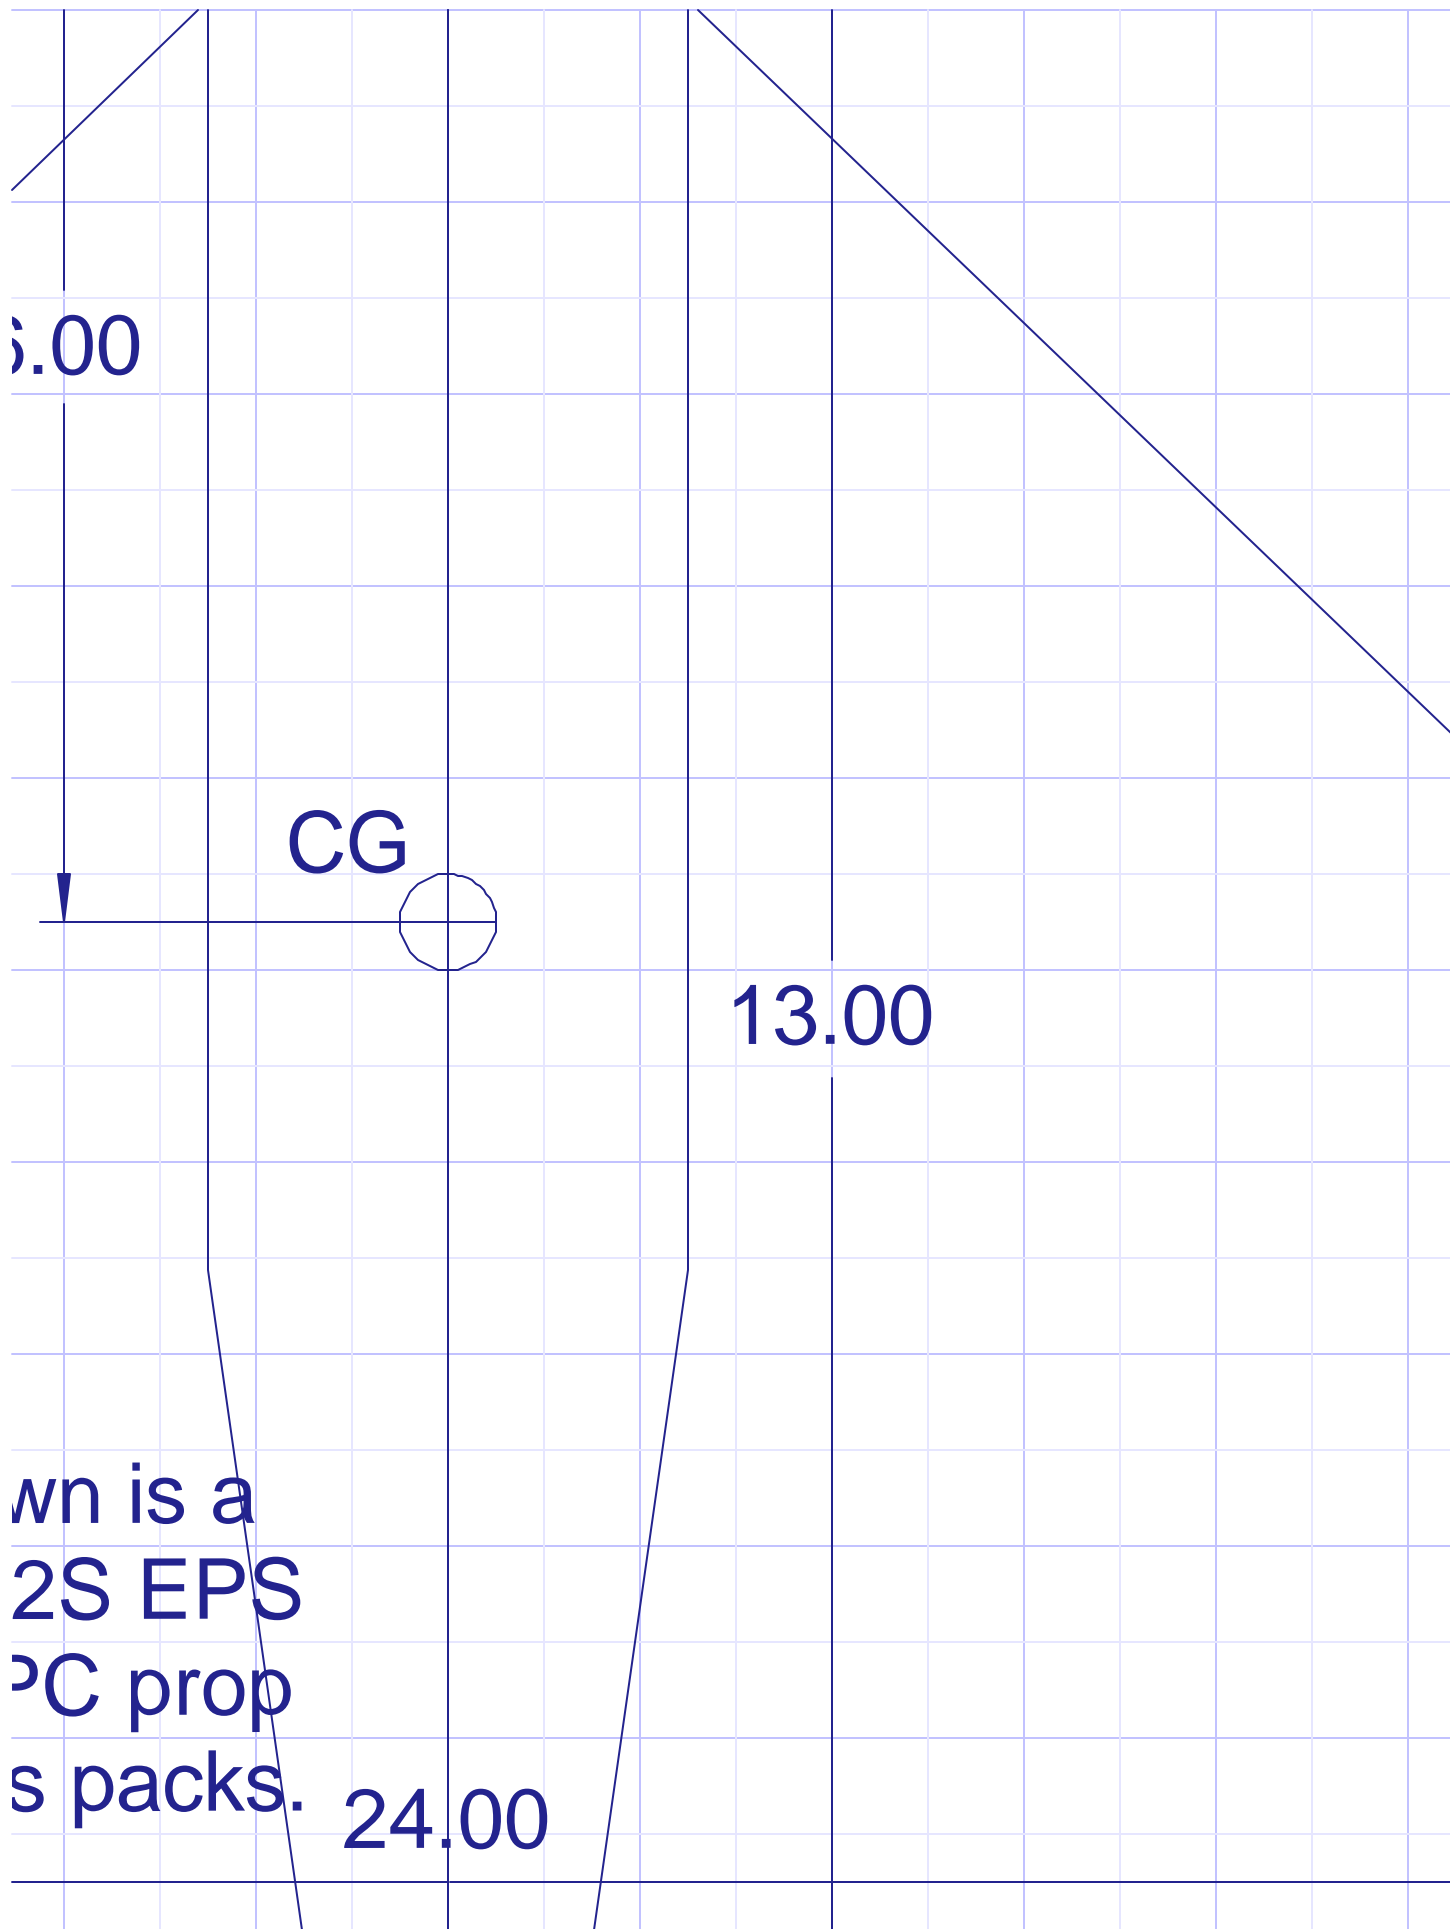

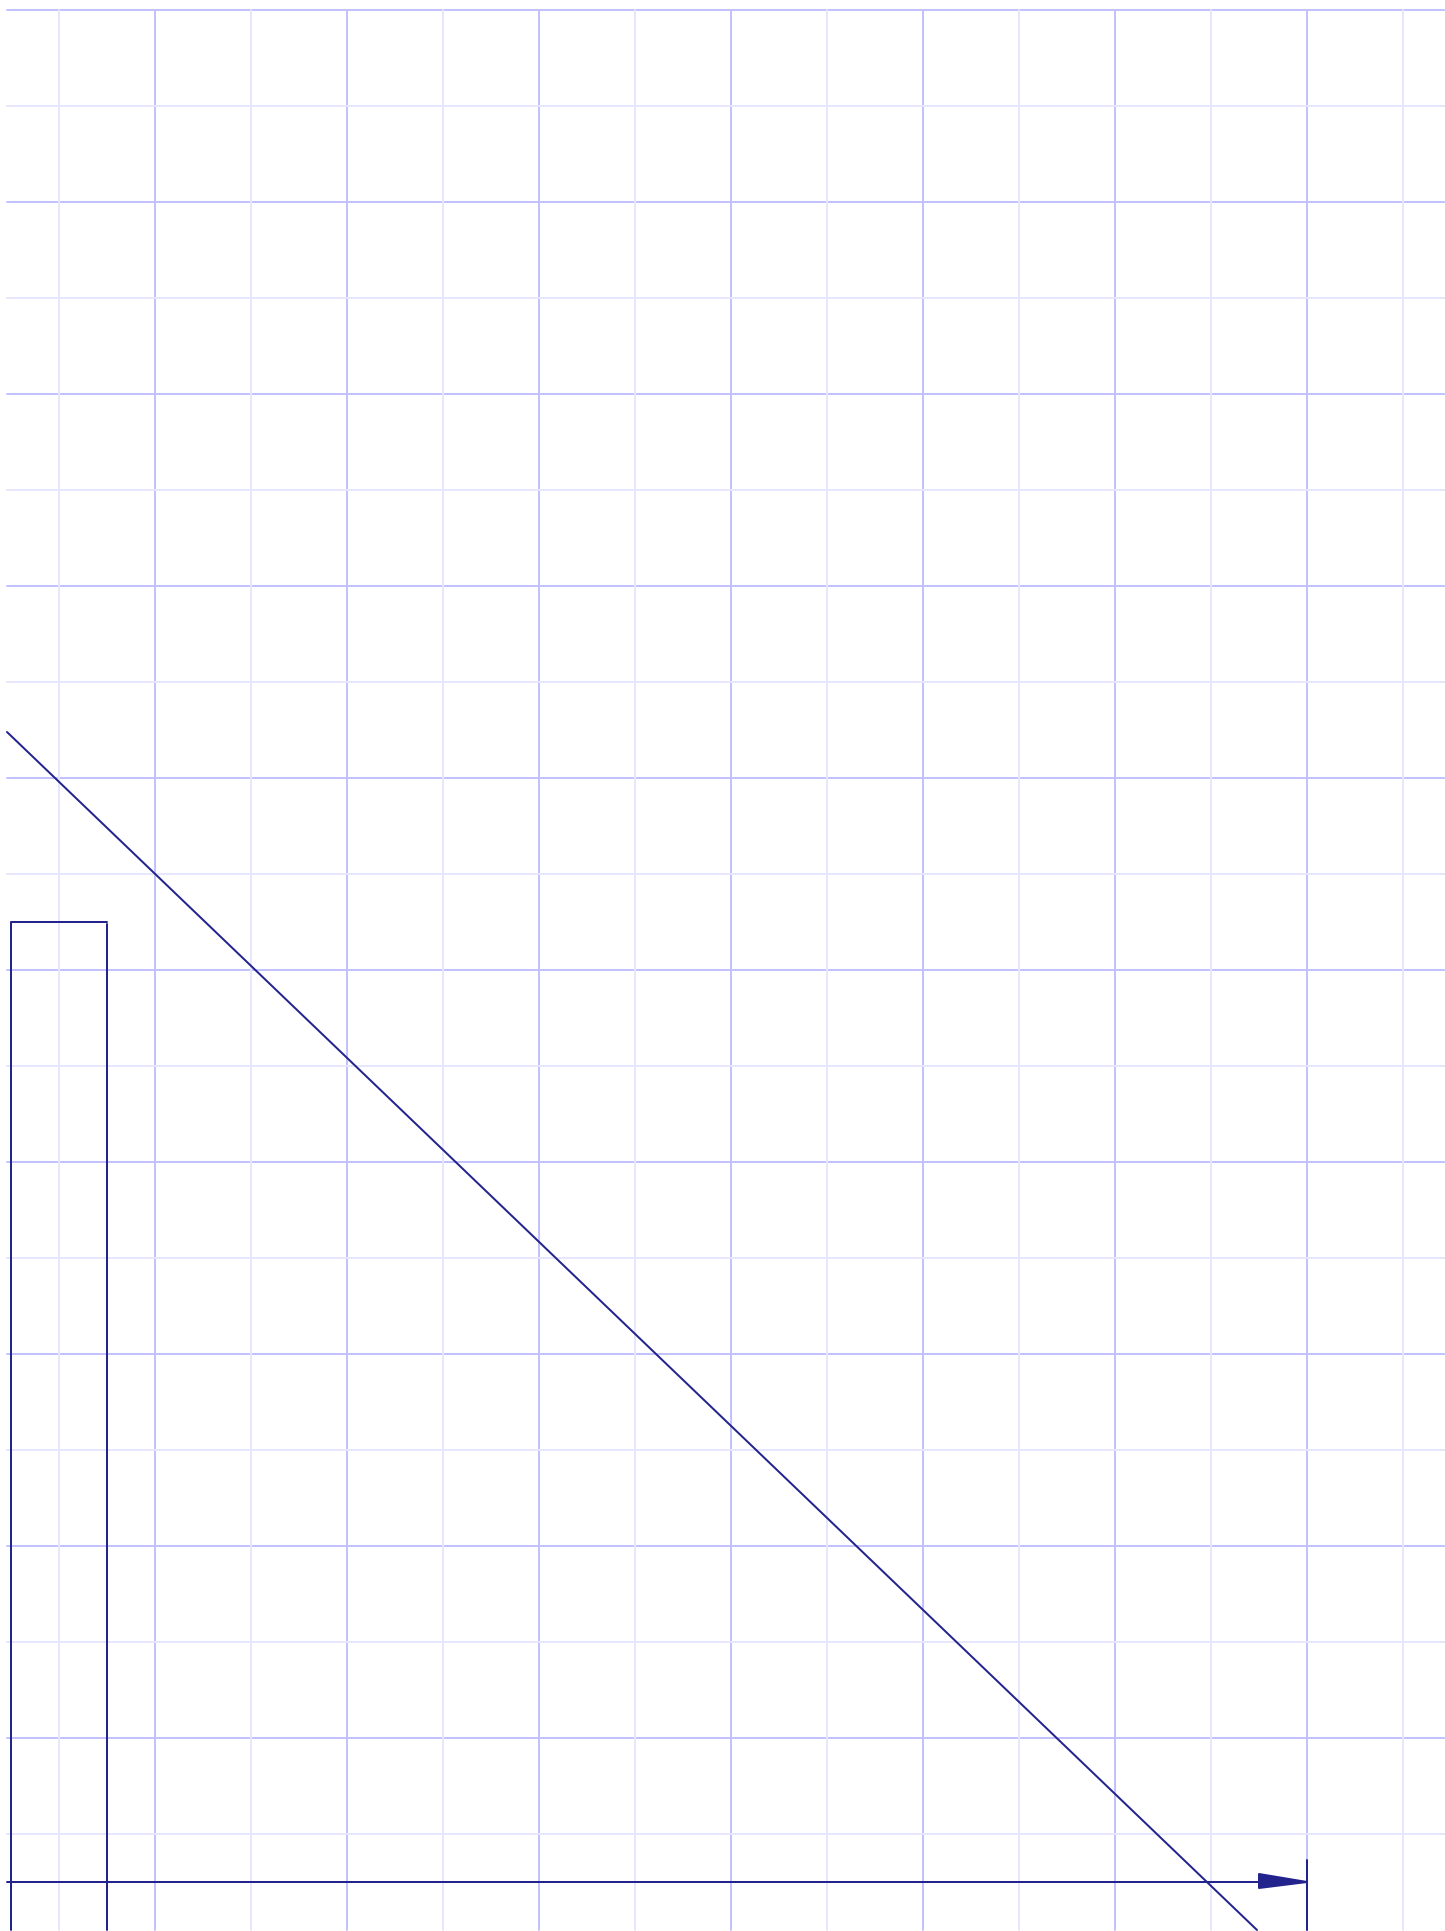

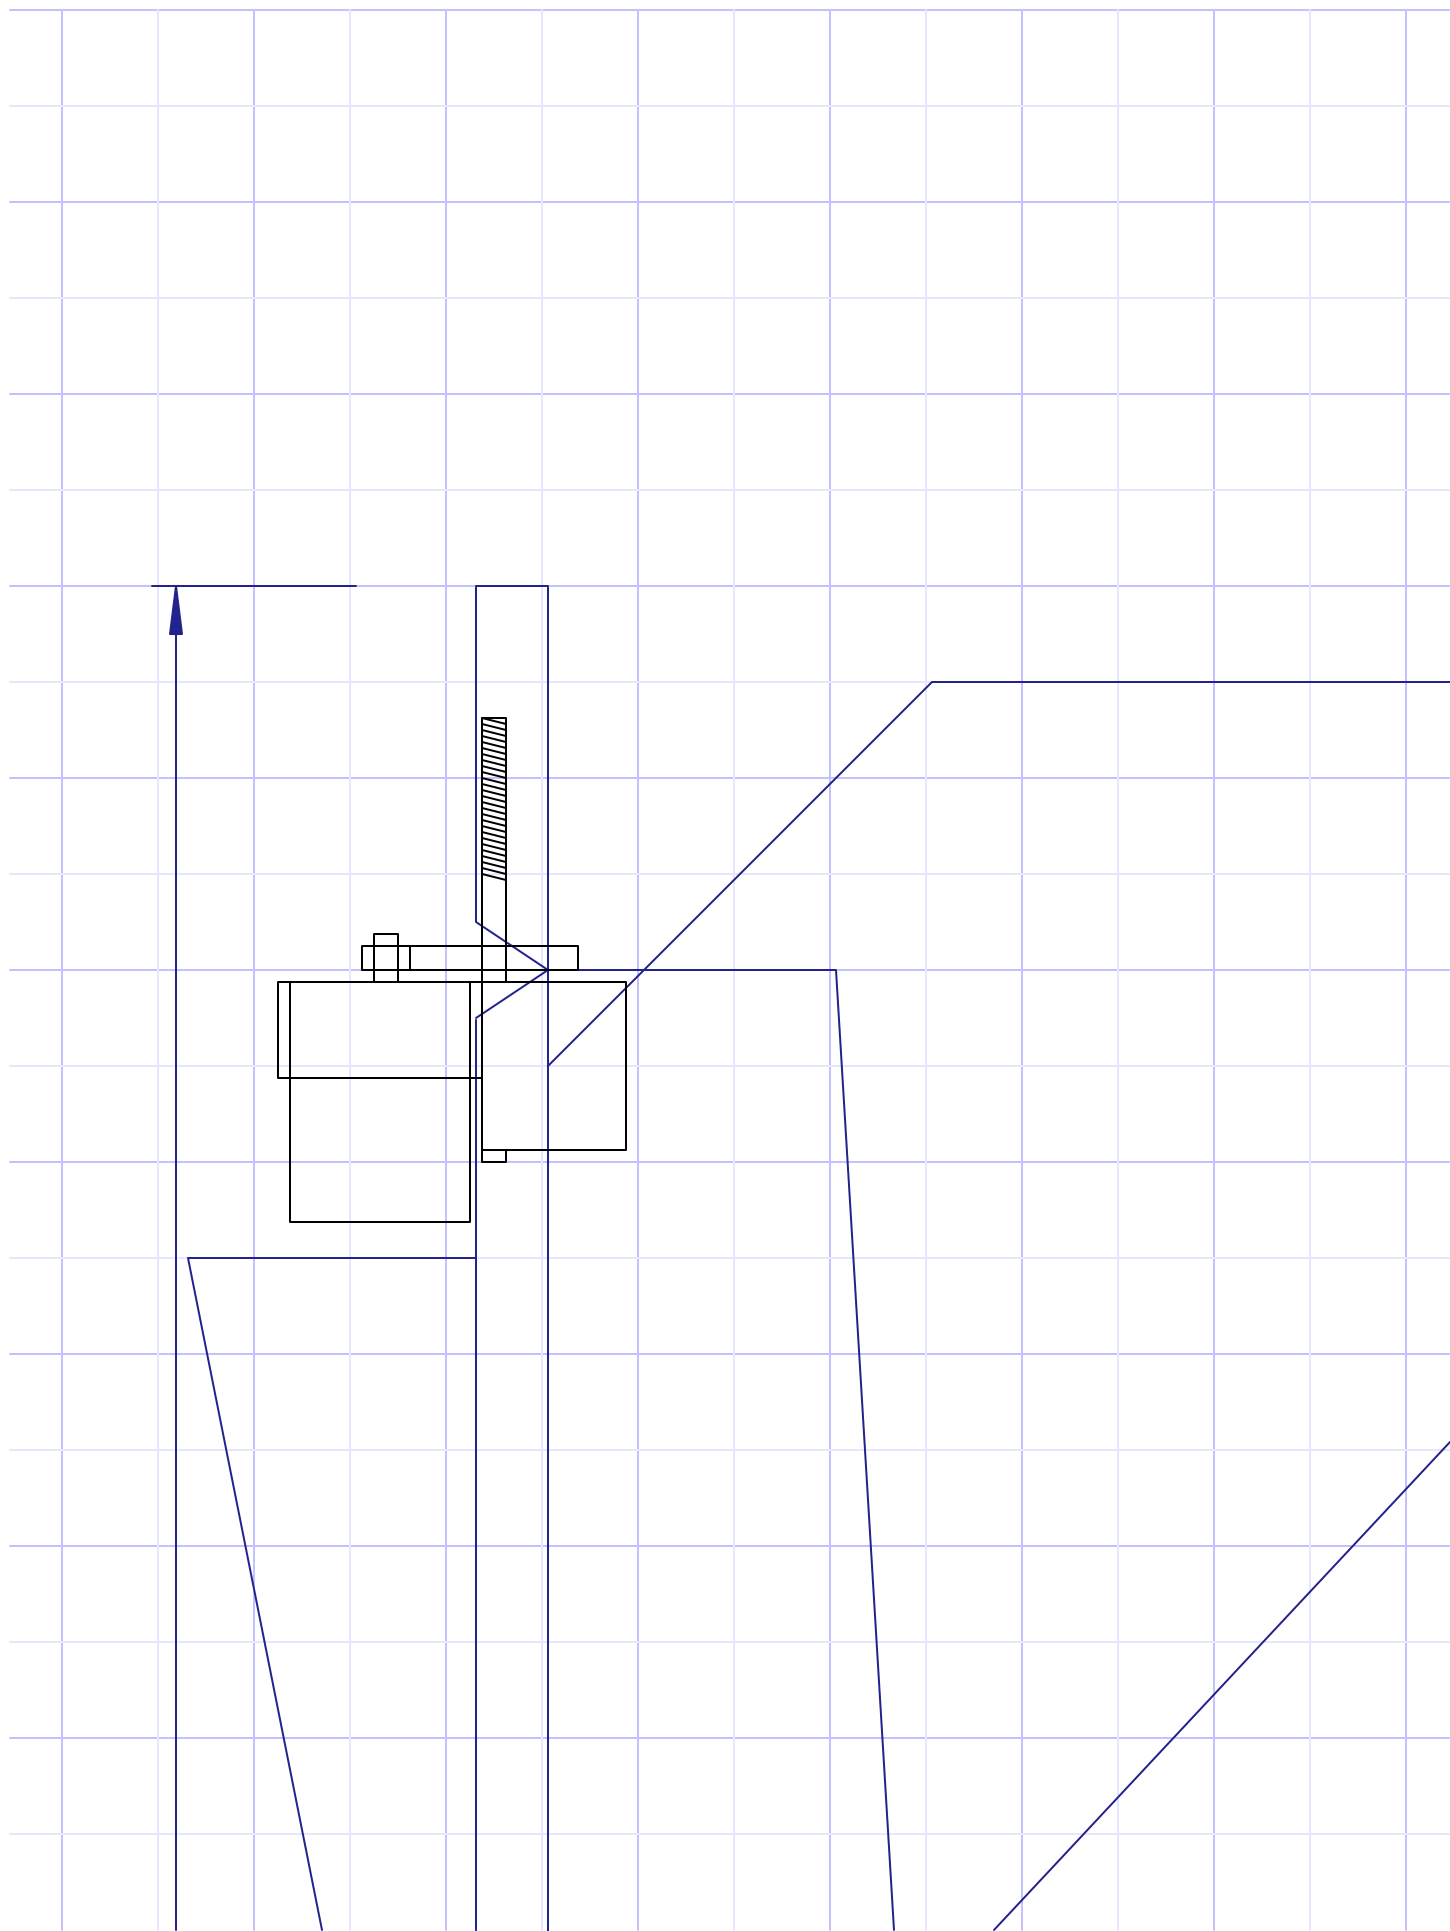

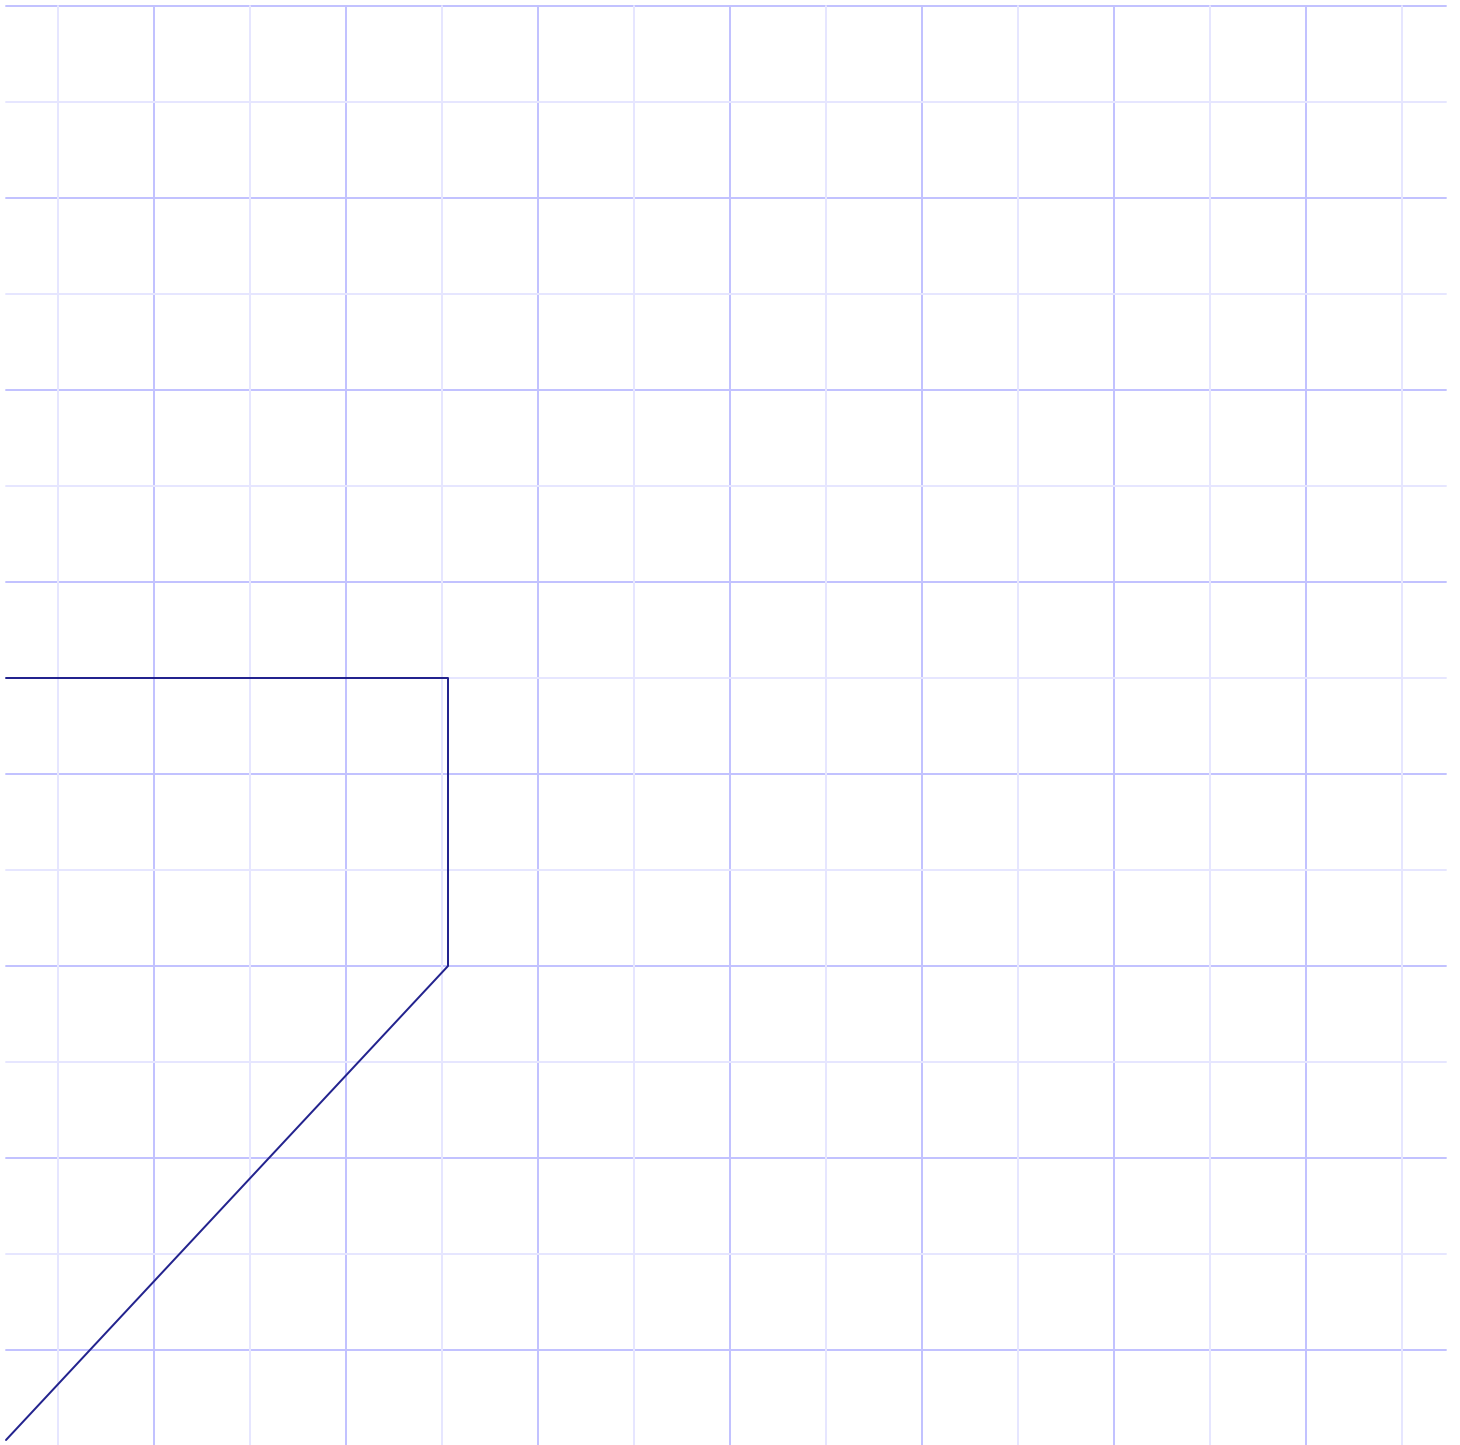

# Insulator

ver 2d

Original by Blueman  
Initially drawn by Bill Bergman  
Adapted by Terheer

