




Make 1

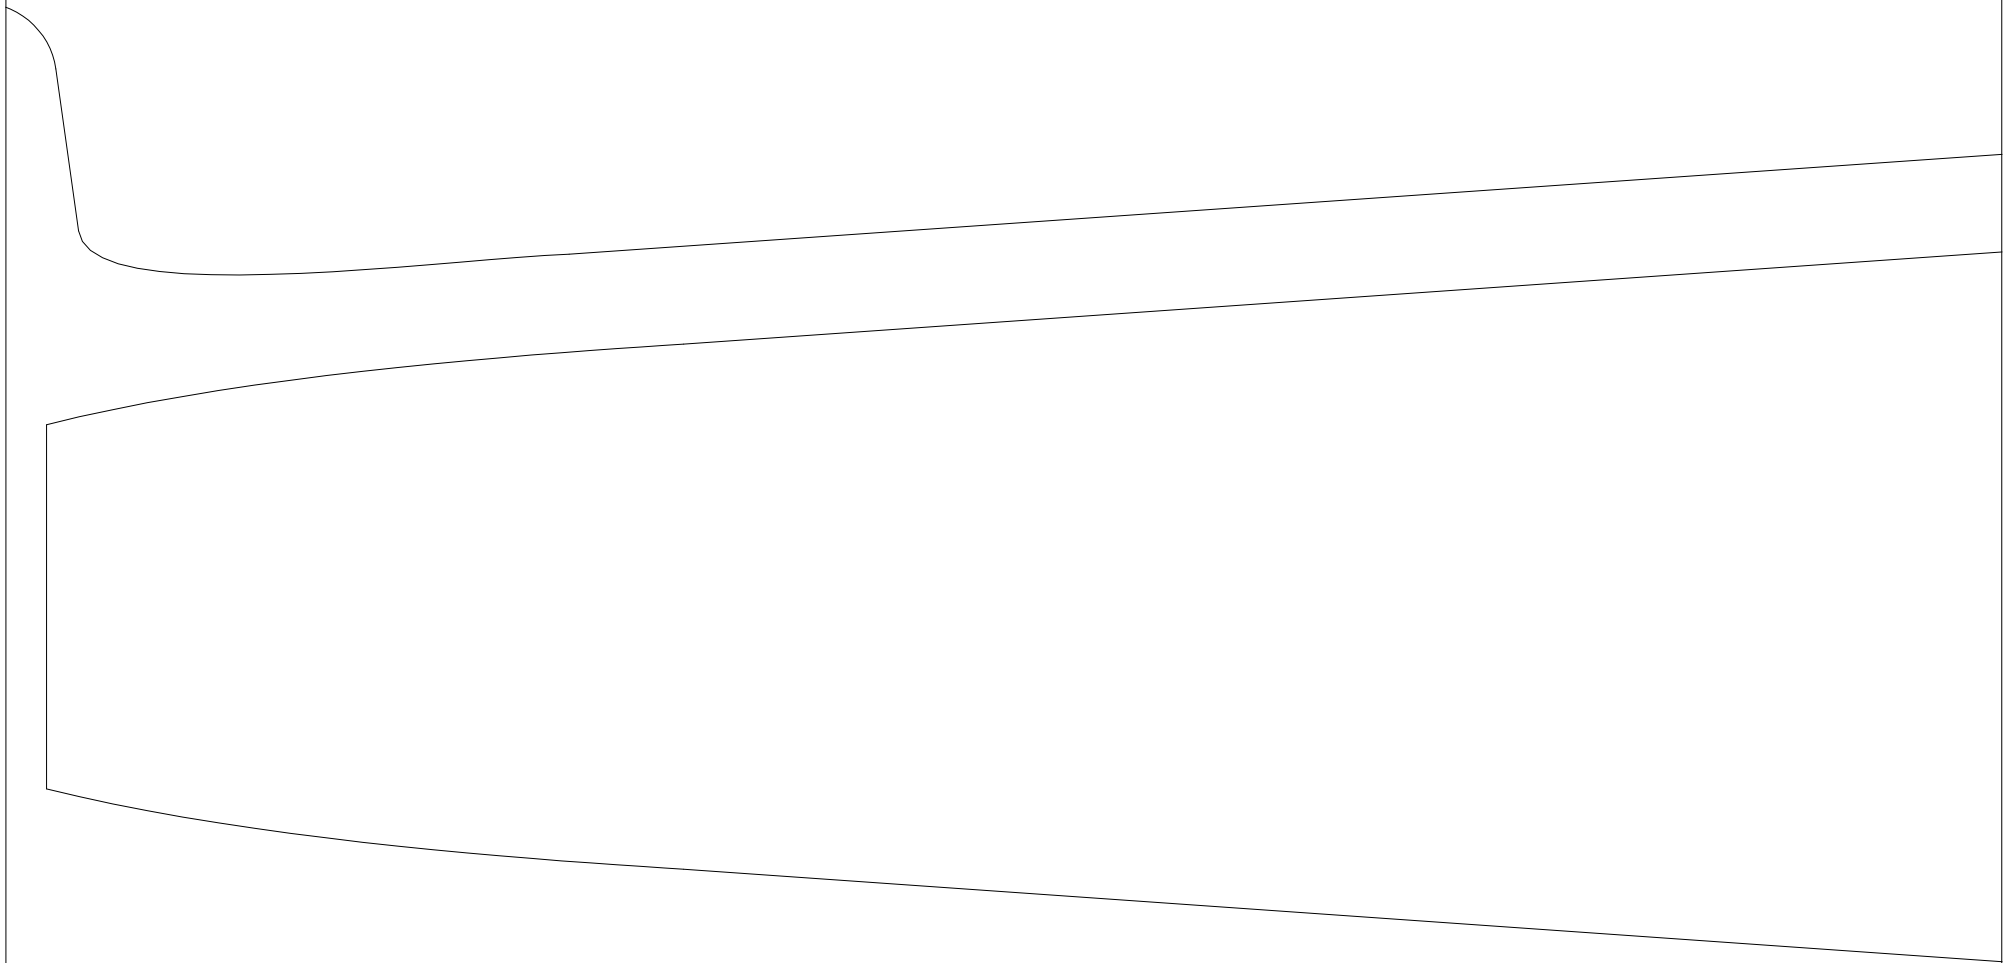

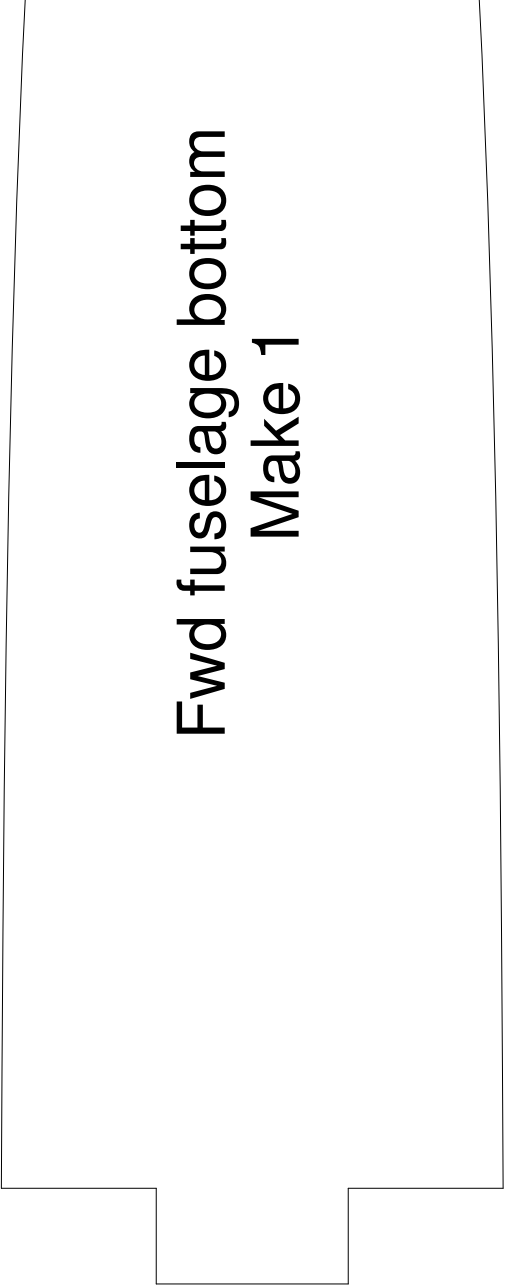

Fuselage/inlet bottom
Make 1



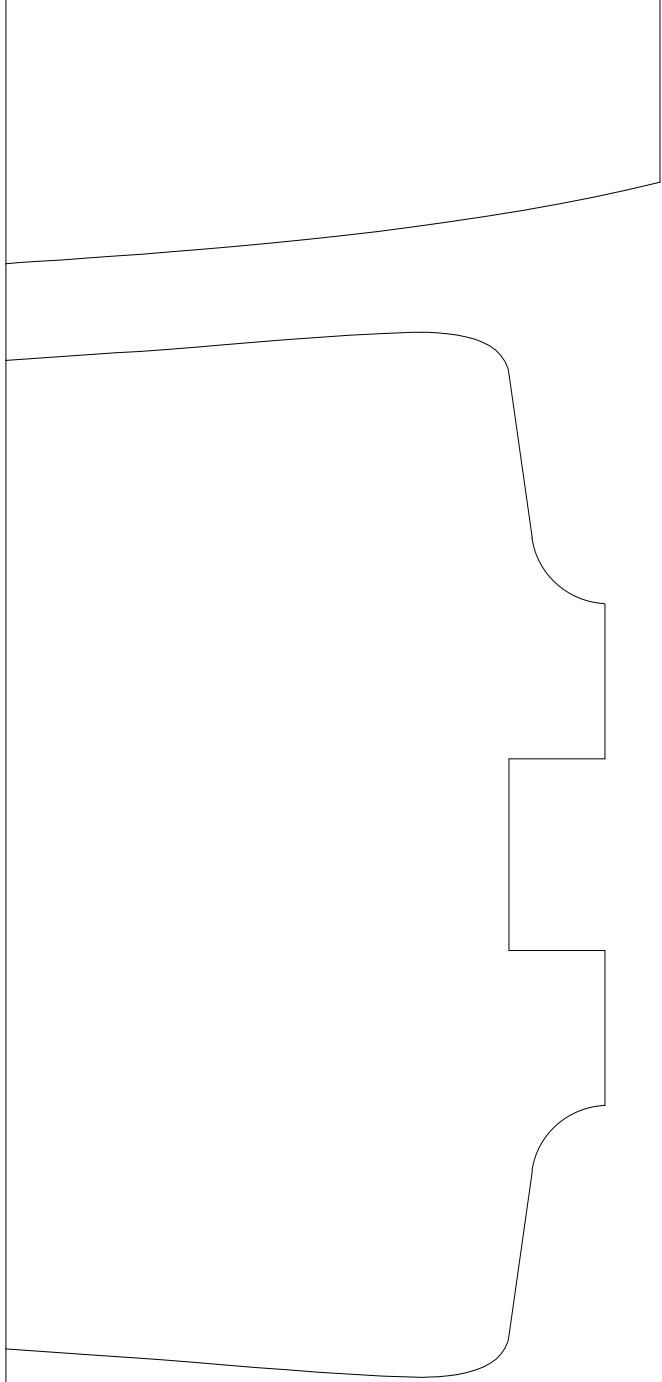



Fwd fuselage bottom
Make 1

nt doublers (top and bottom)
Make 2 from 1/32" ply
1" x 0.75"

Horizontal tail
Make 1

Wing root ribs
Make 2





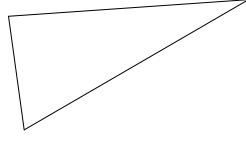


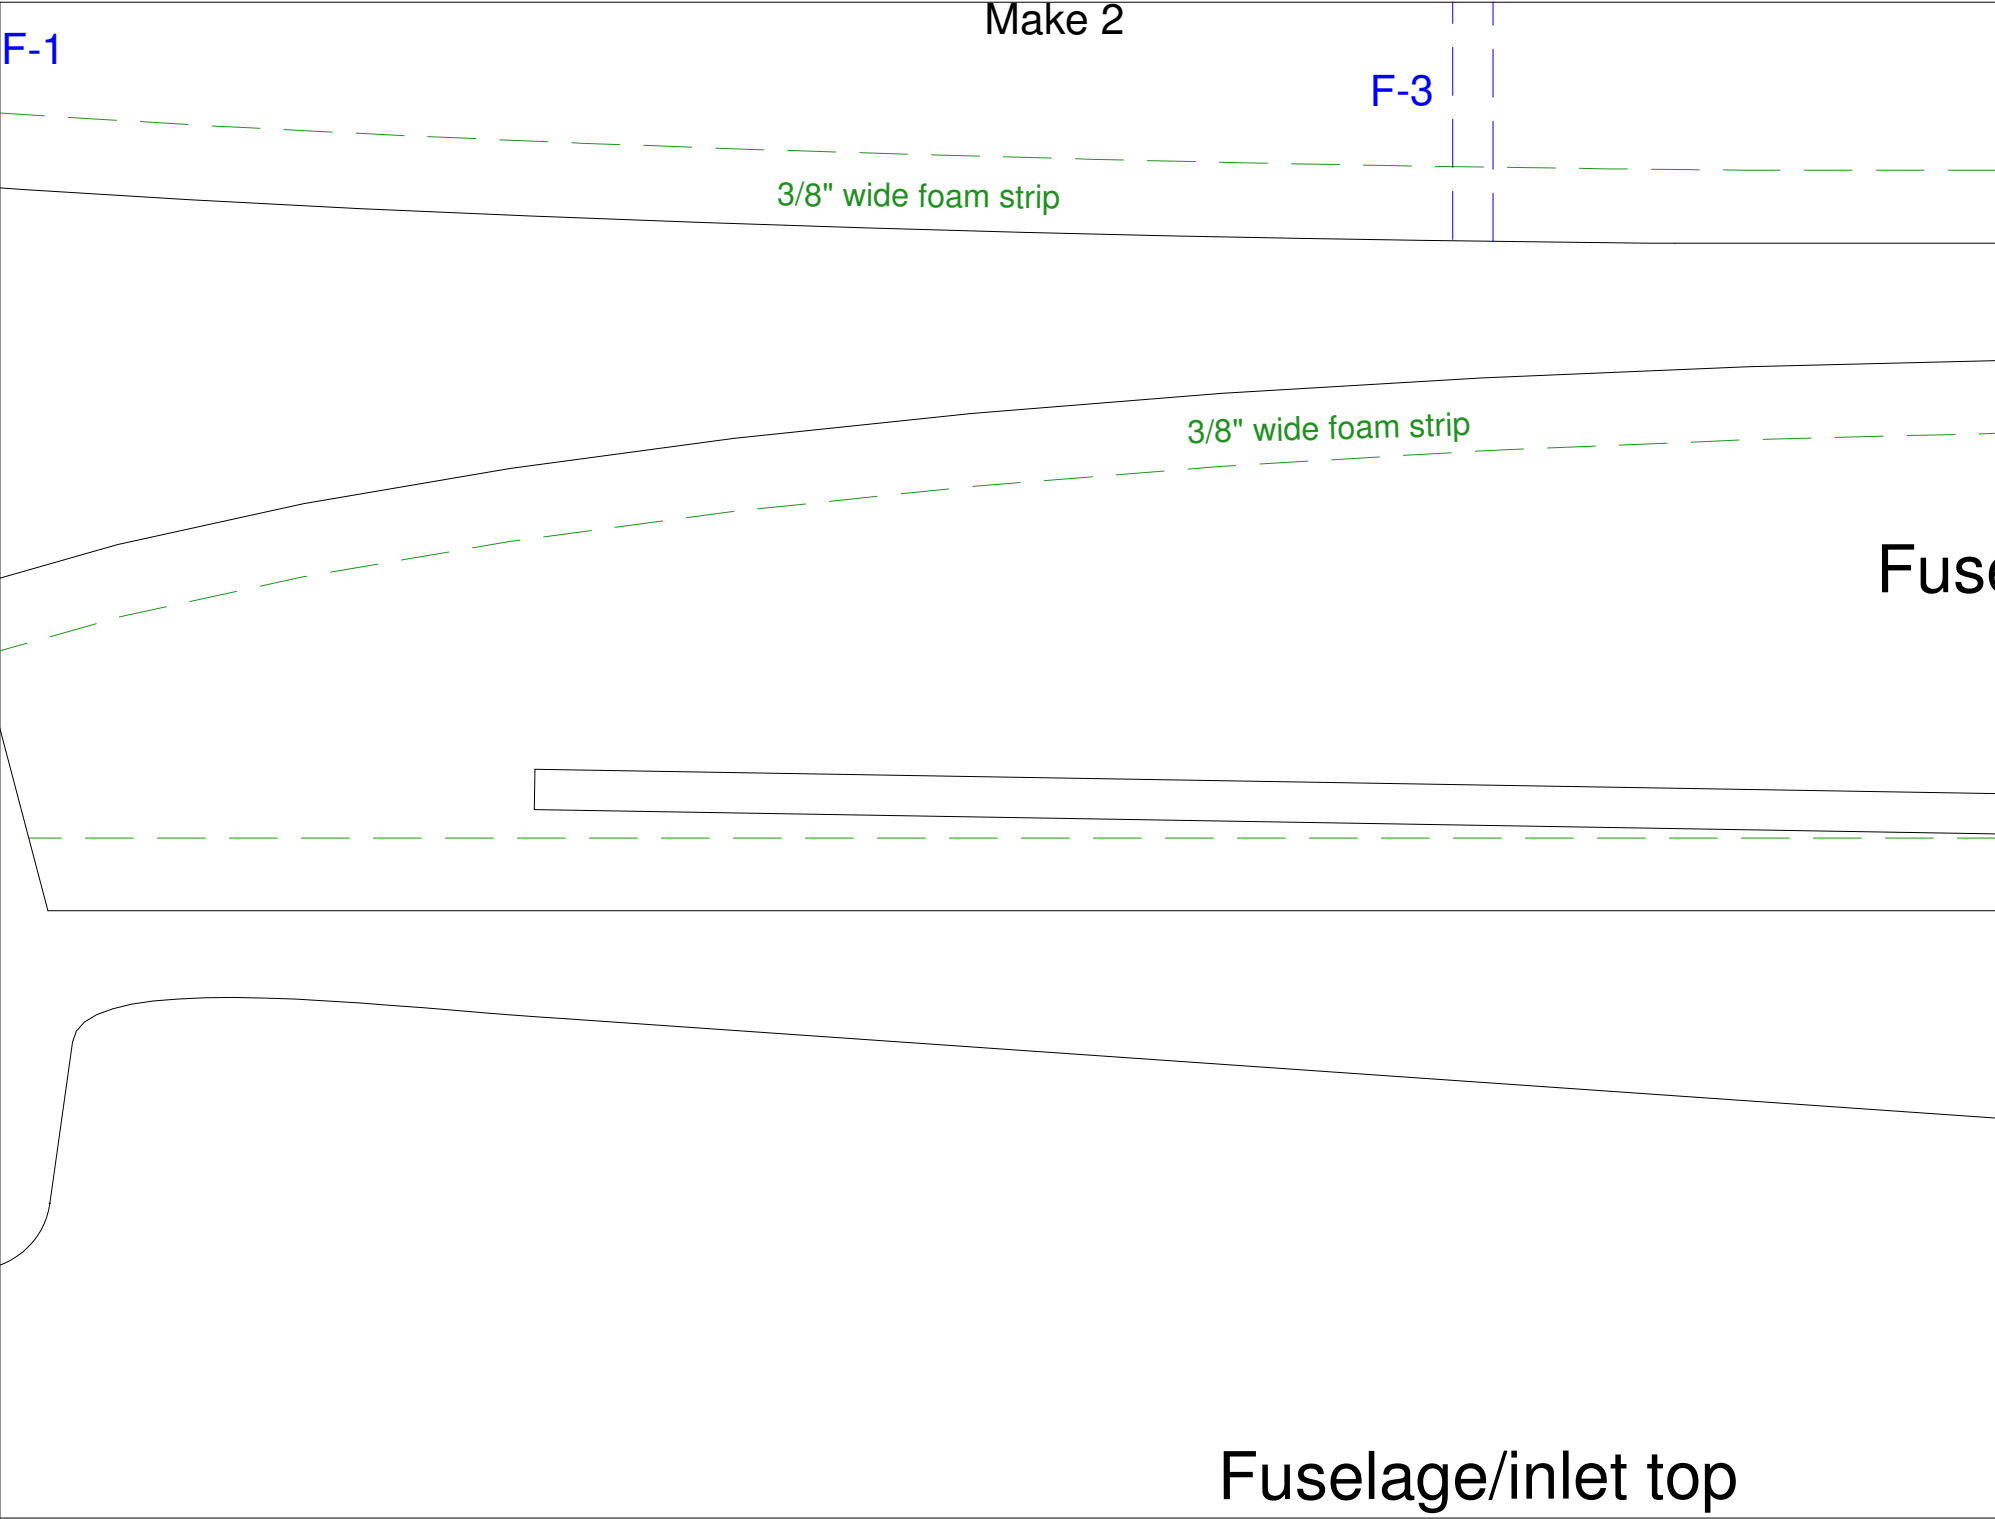

Make 1

elage/Inlet Sides
Make 2

3/8" wide foam strip

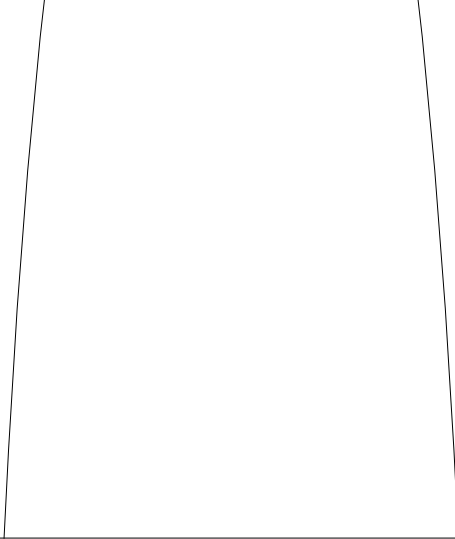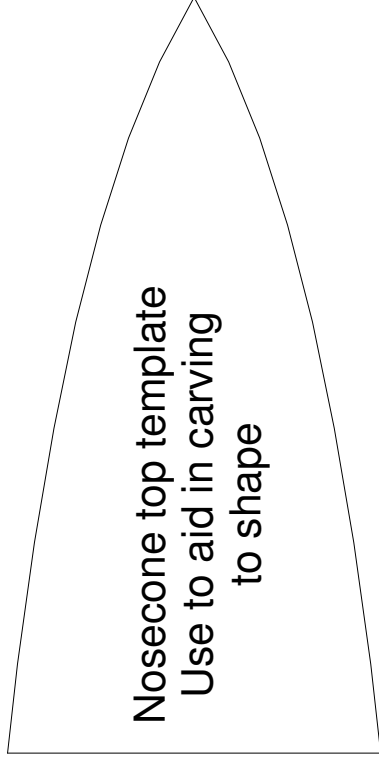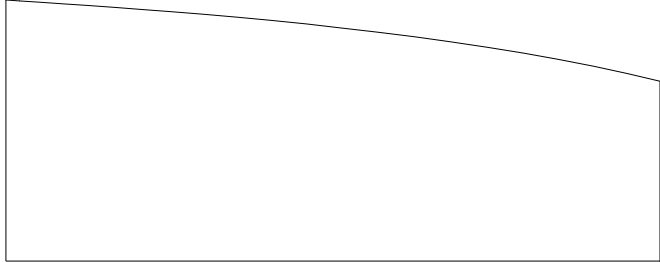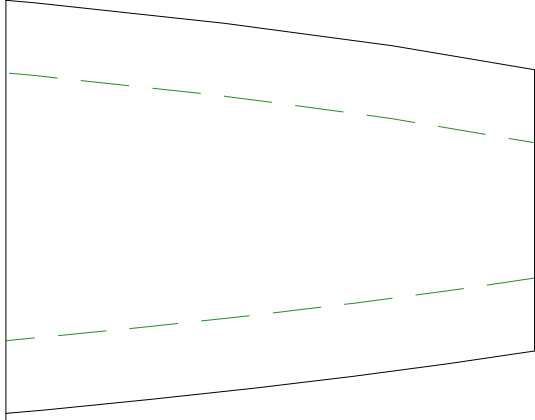


Bulkhead F-3
Make 1


Bulkhead F-2
Make 1


Bulkhead F-1
Make 1

Fwd Fuselage Top
Make 1

Wing root fillets

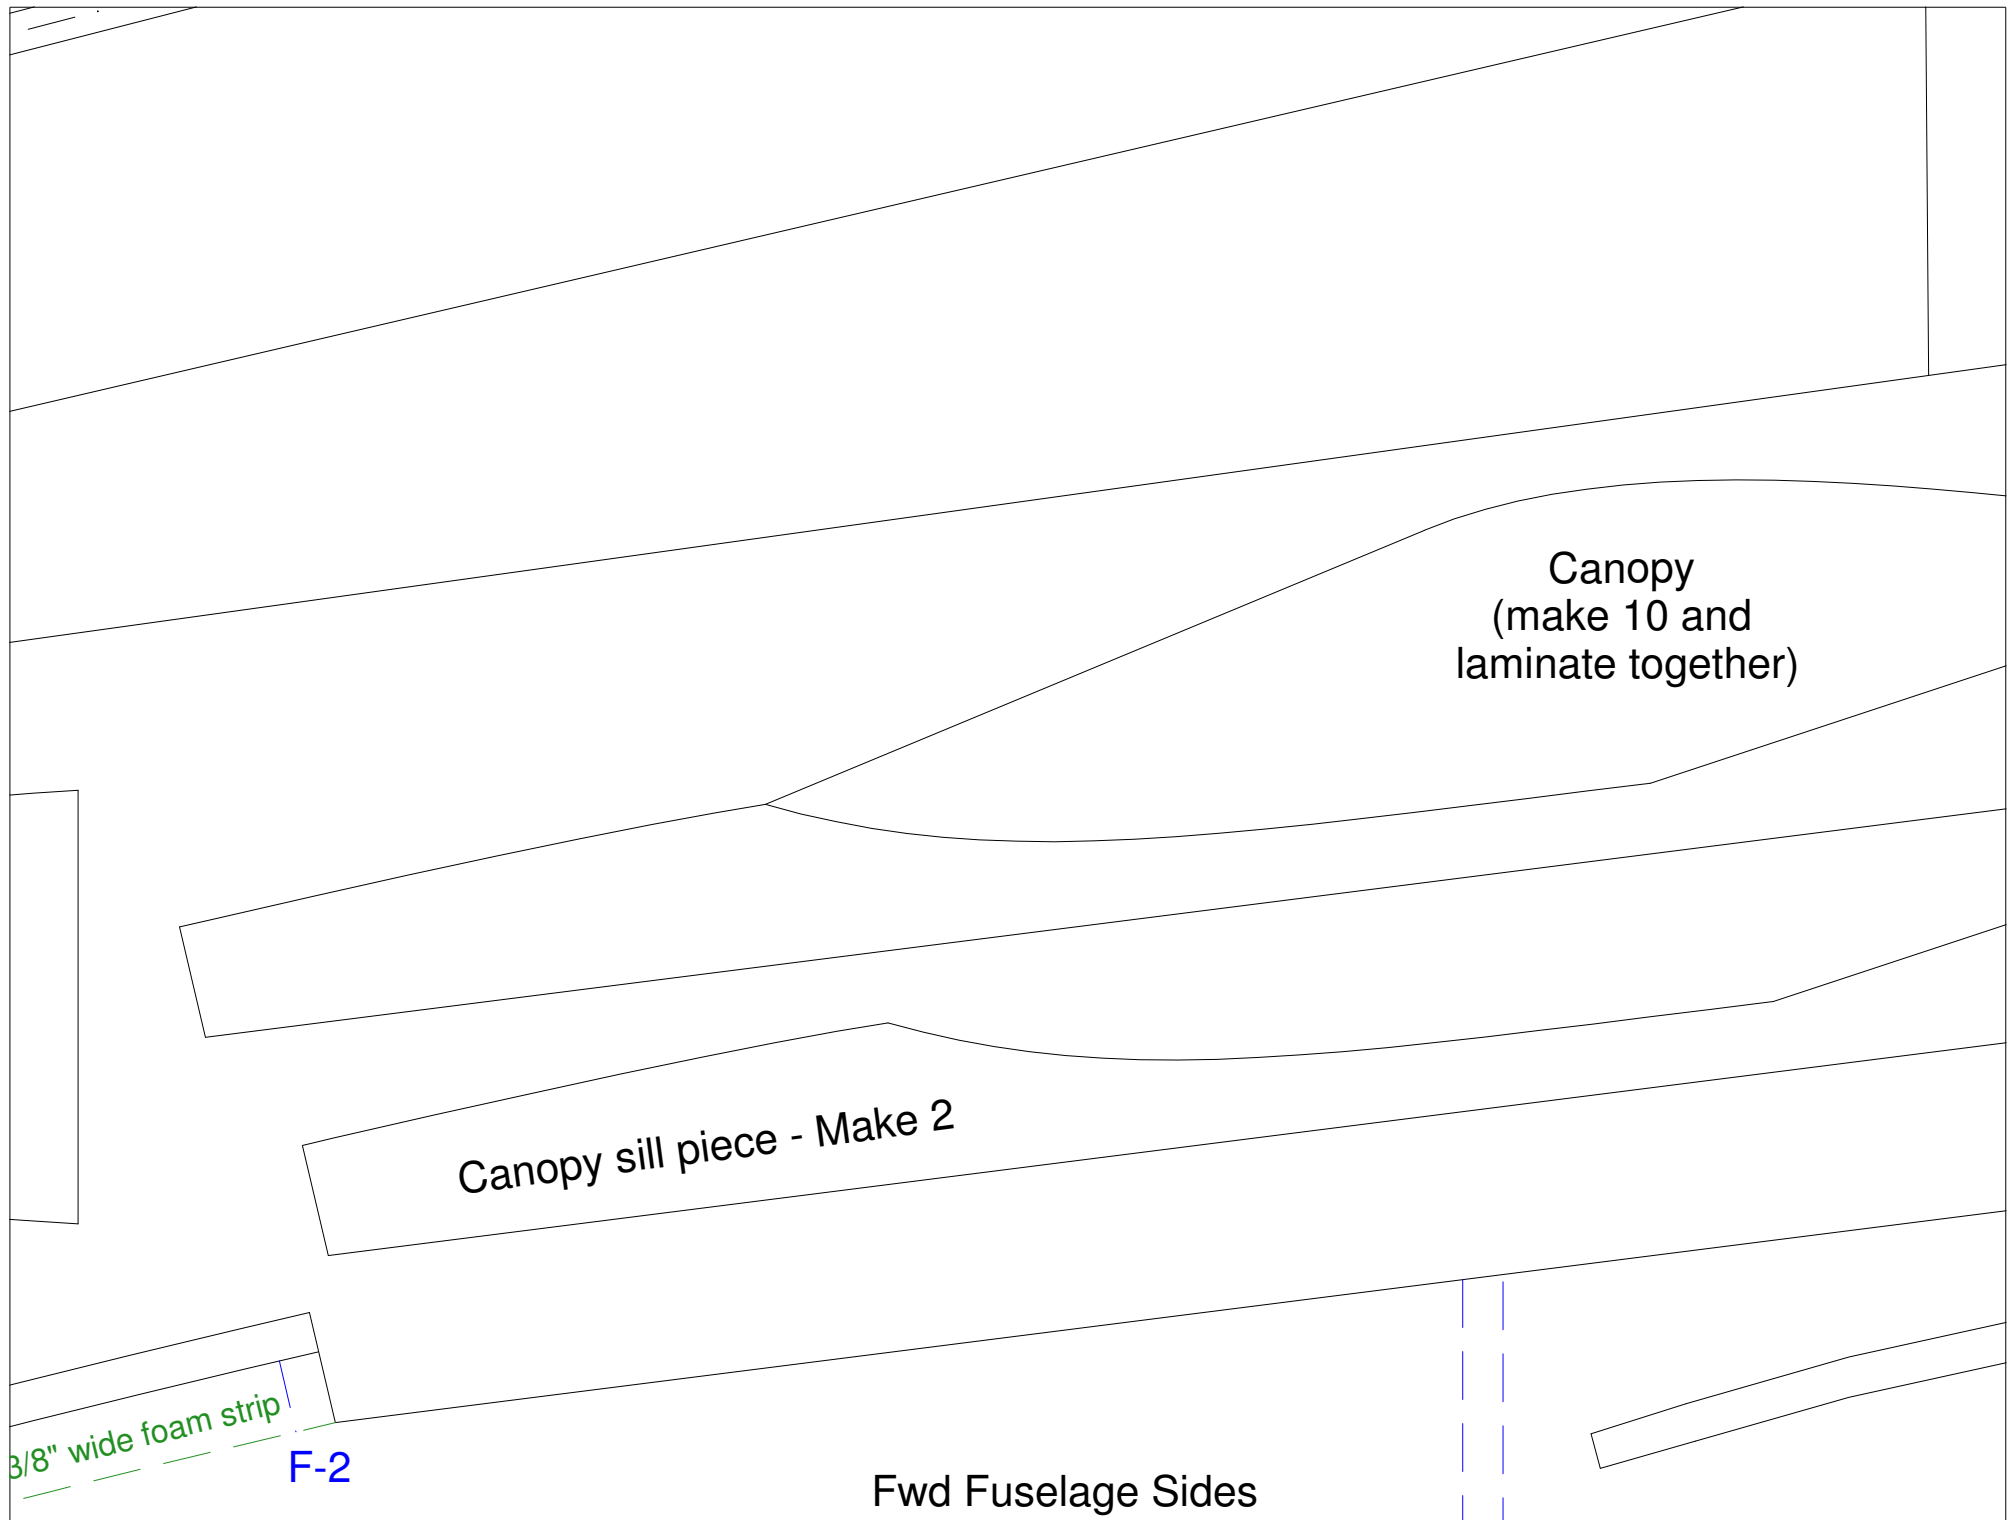

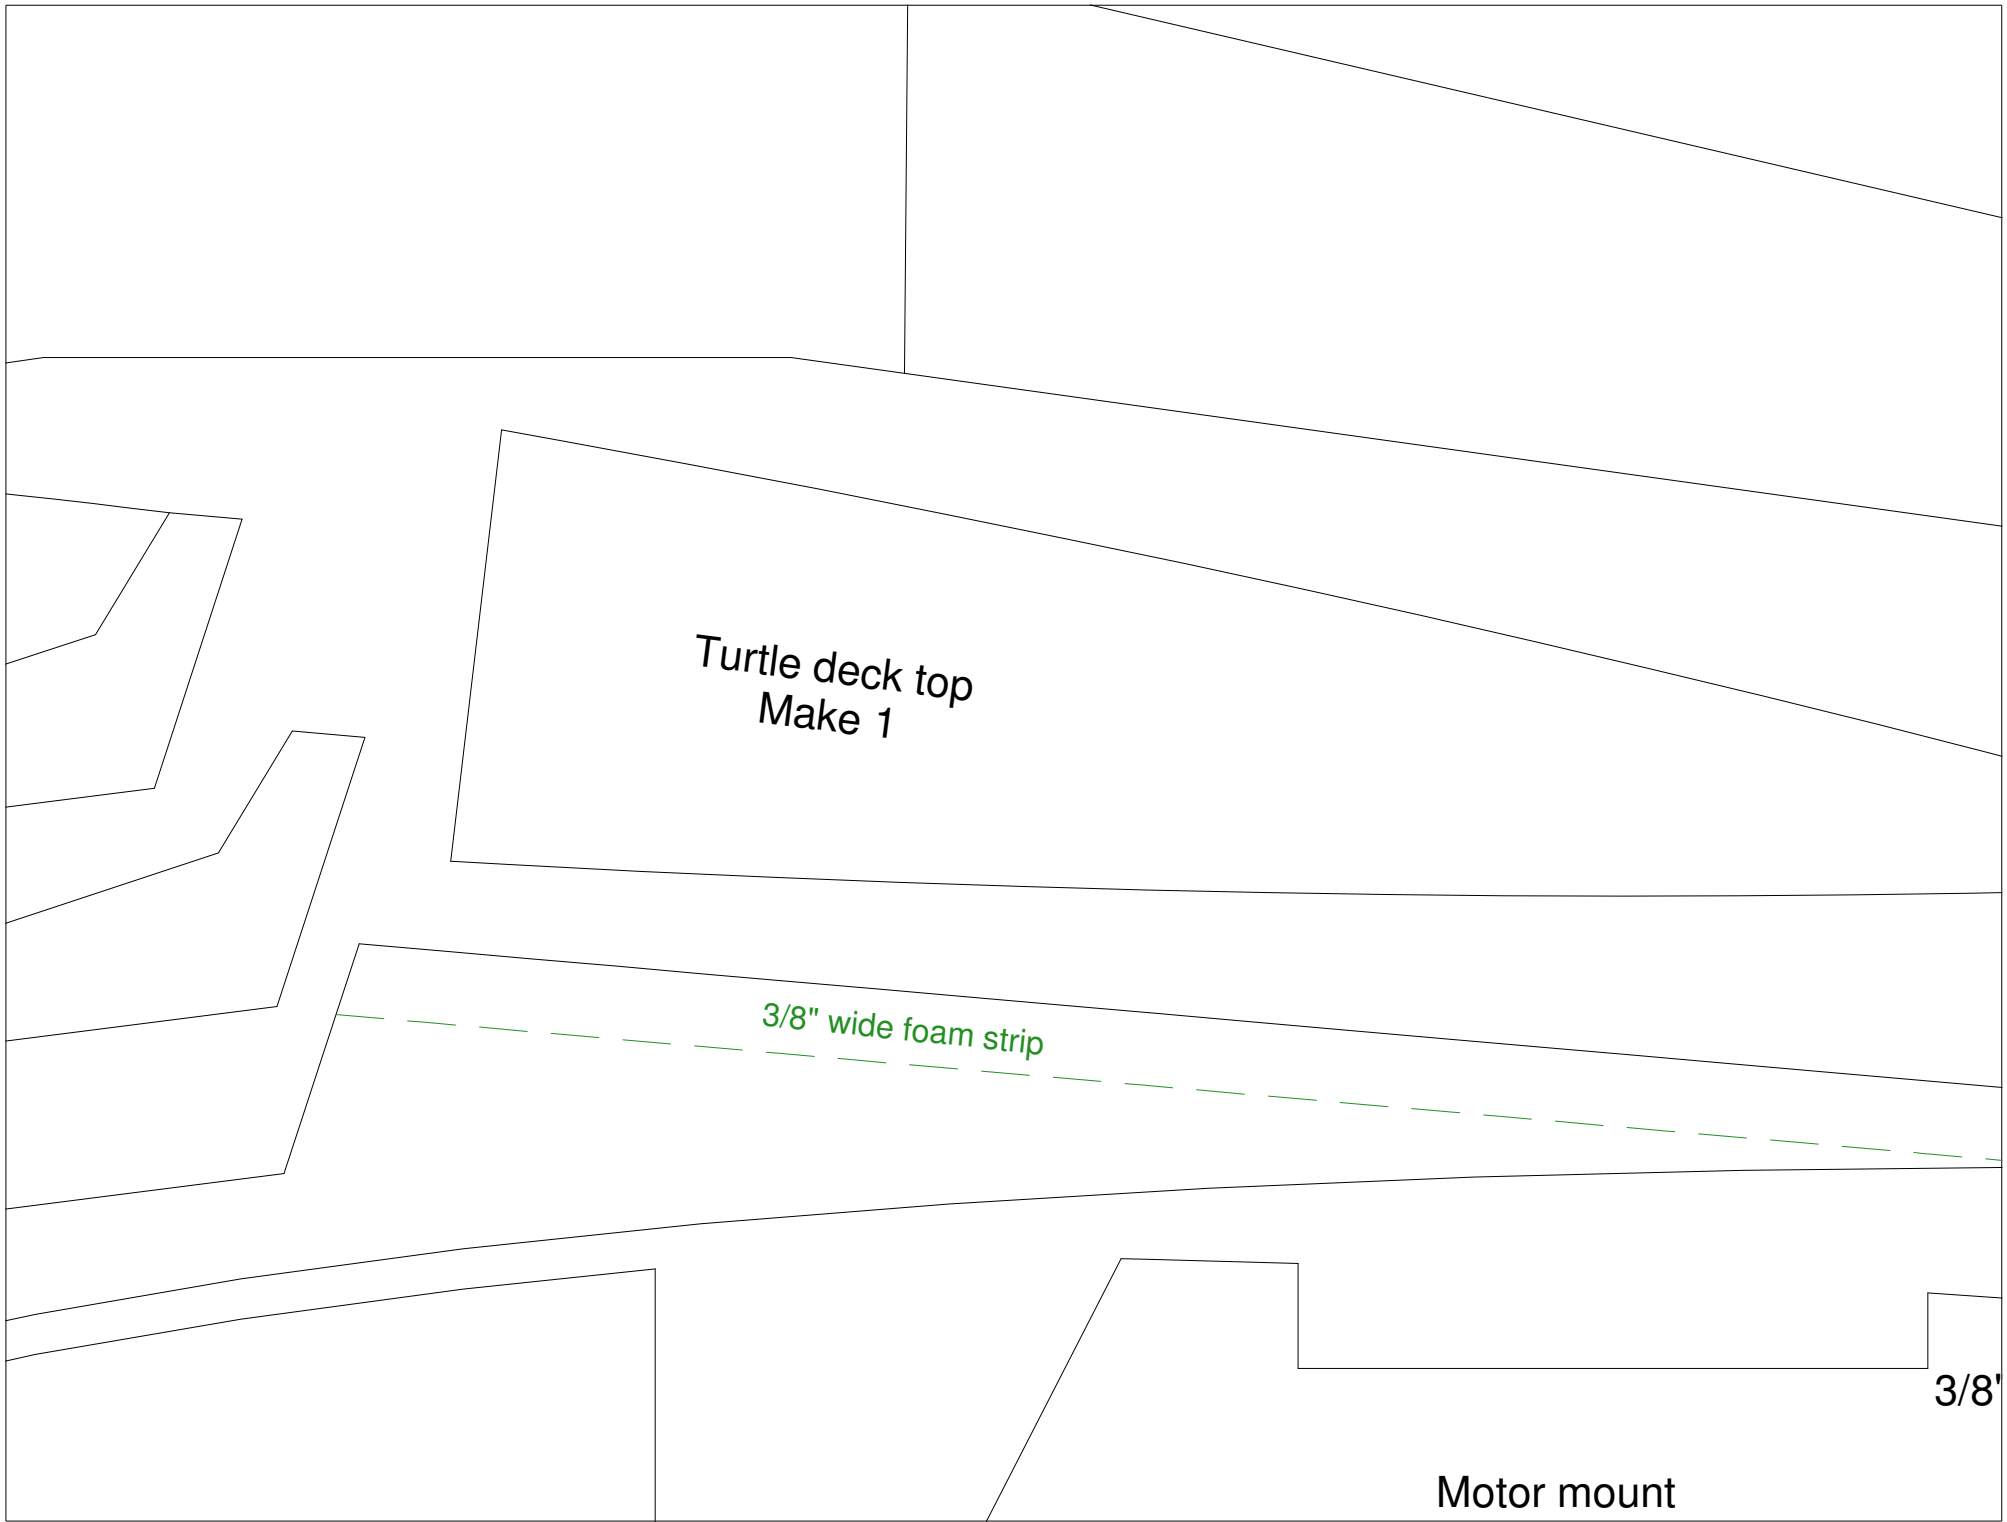


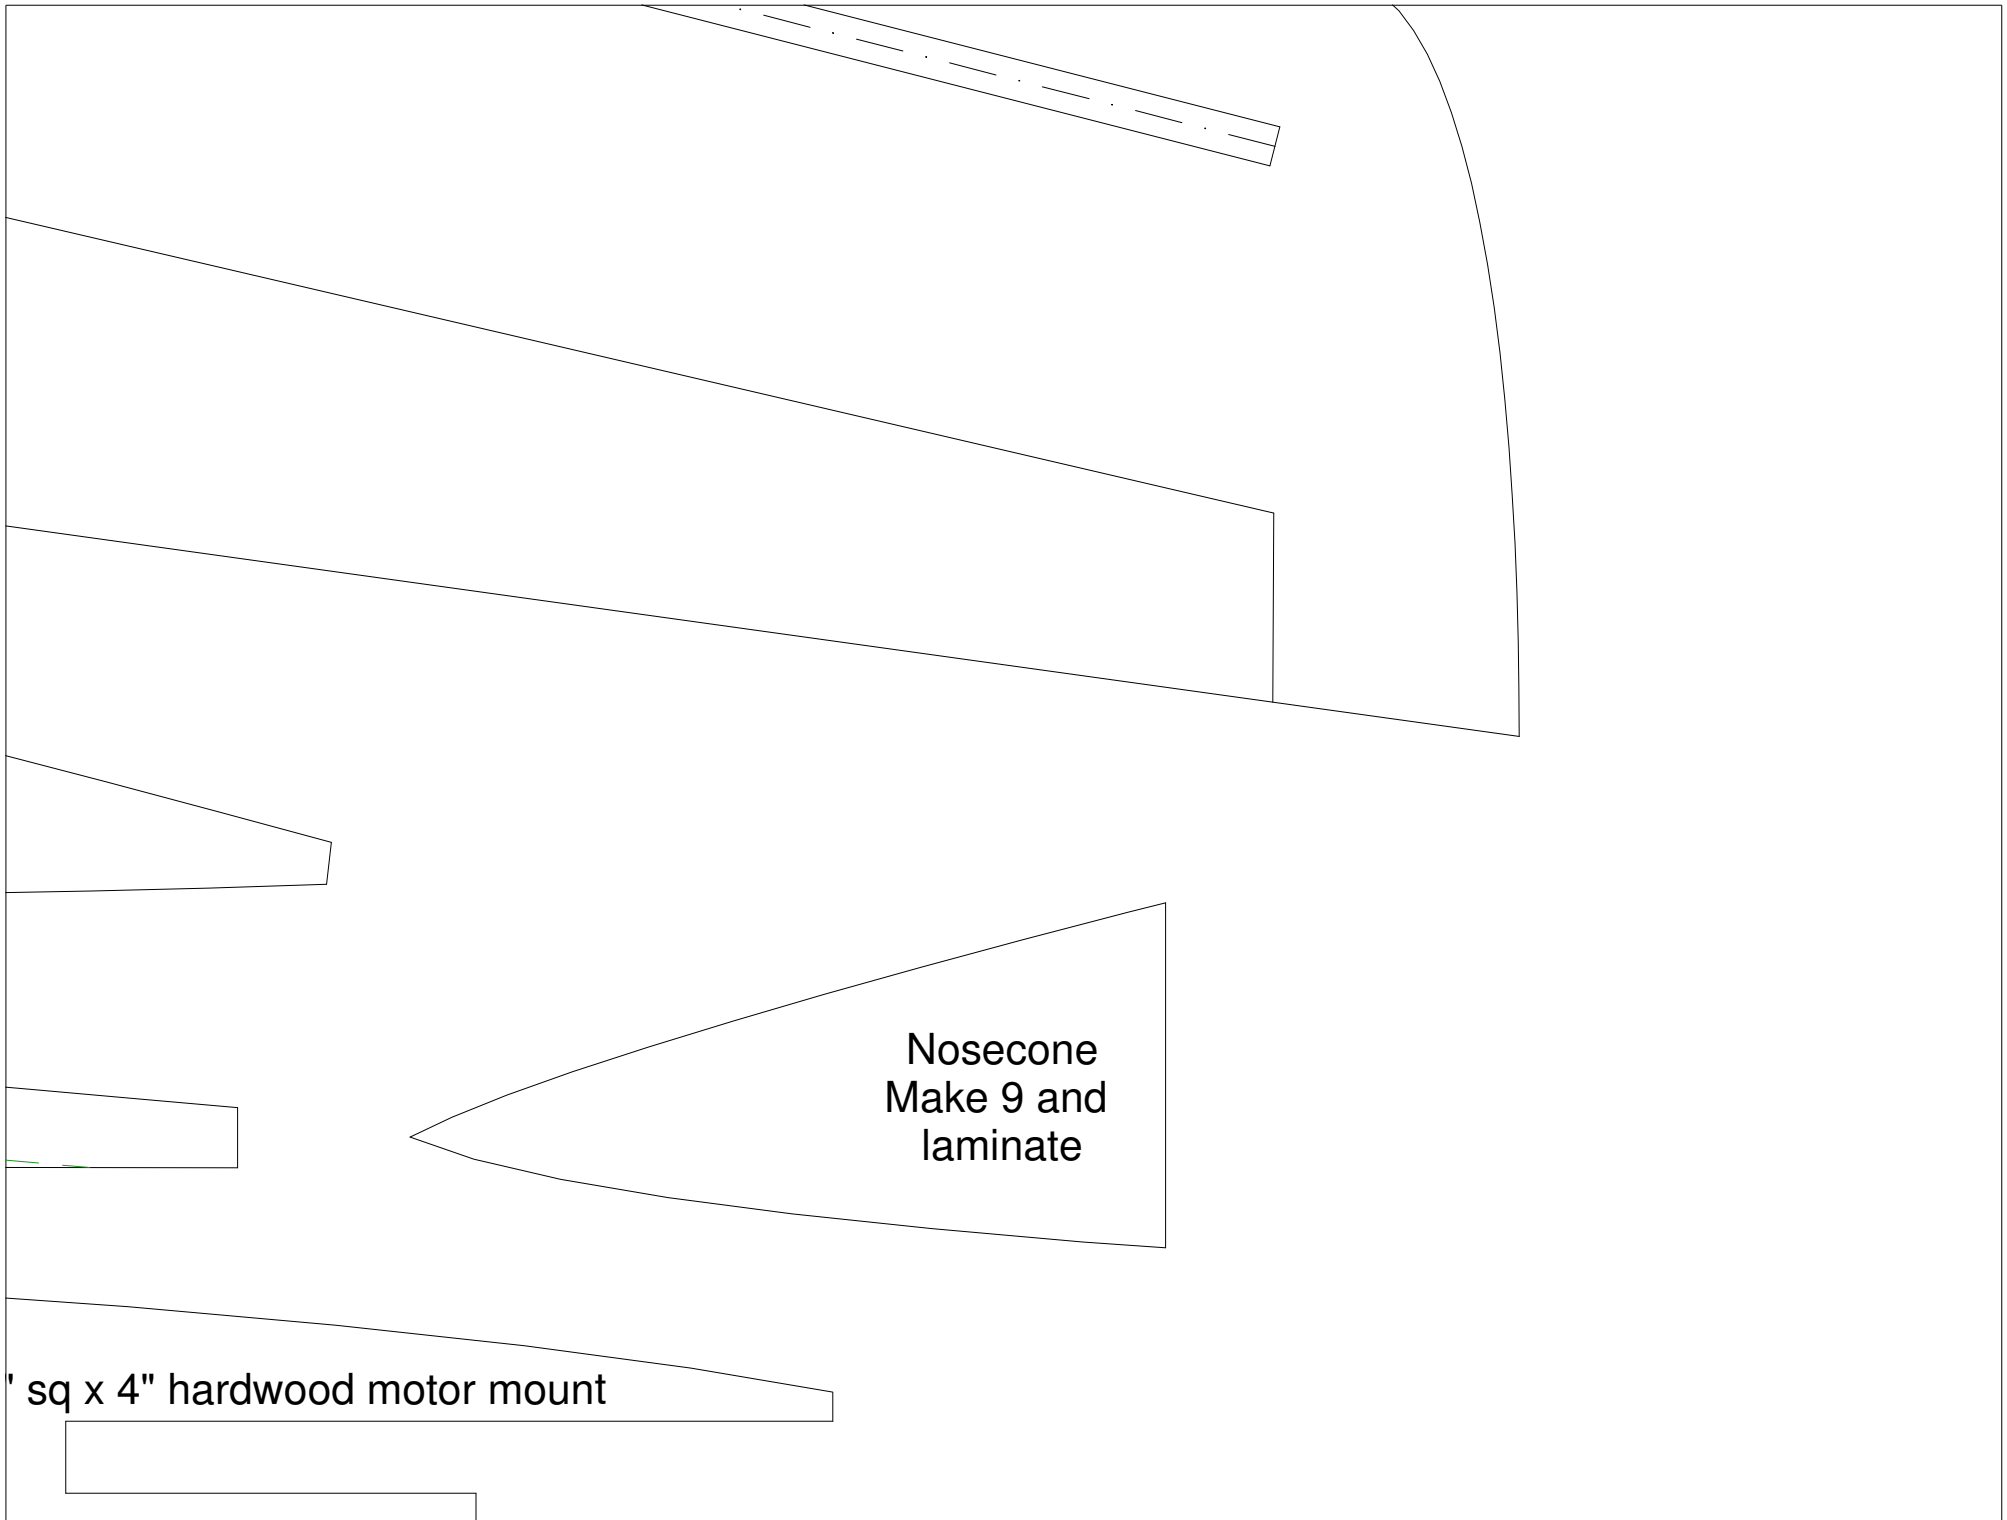


Nosecone
Make 9 and
laminate

' sq x 4" hardwood motor mount


Vertical tail
Make 1

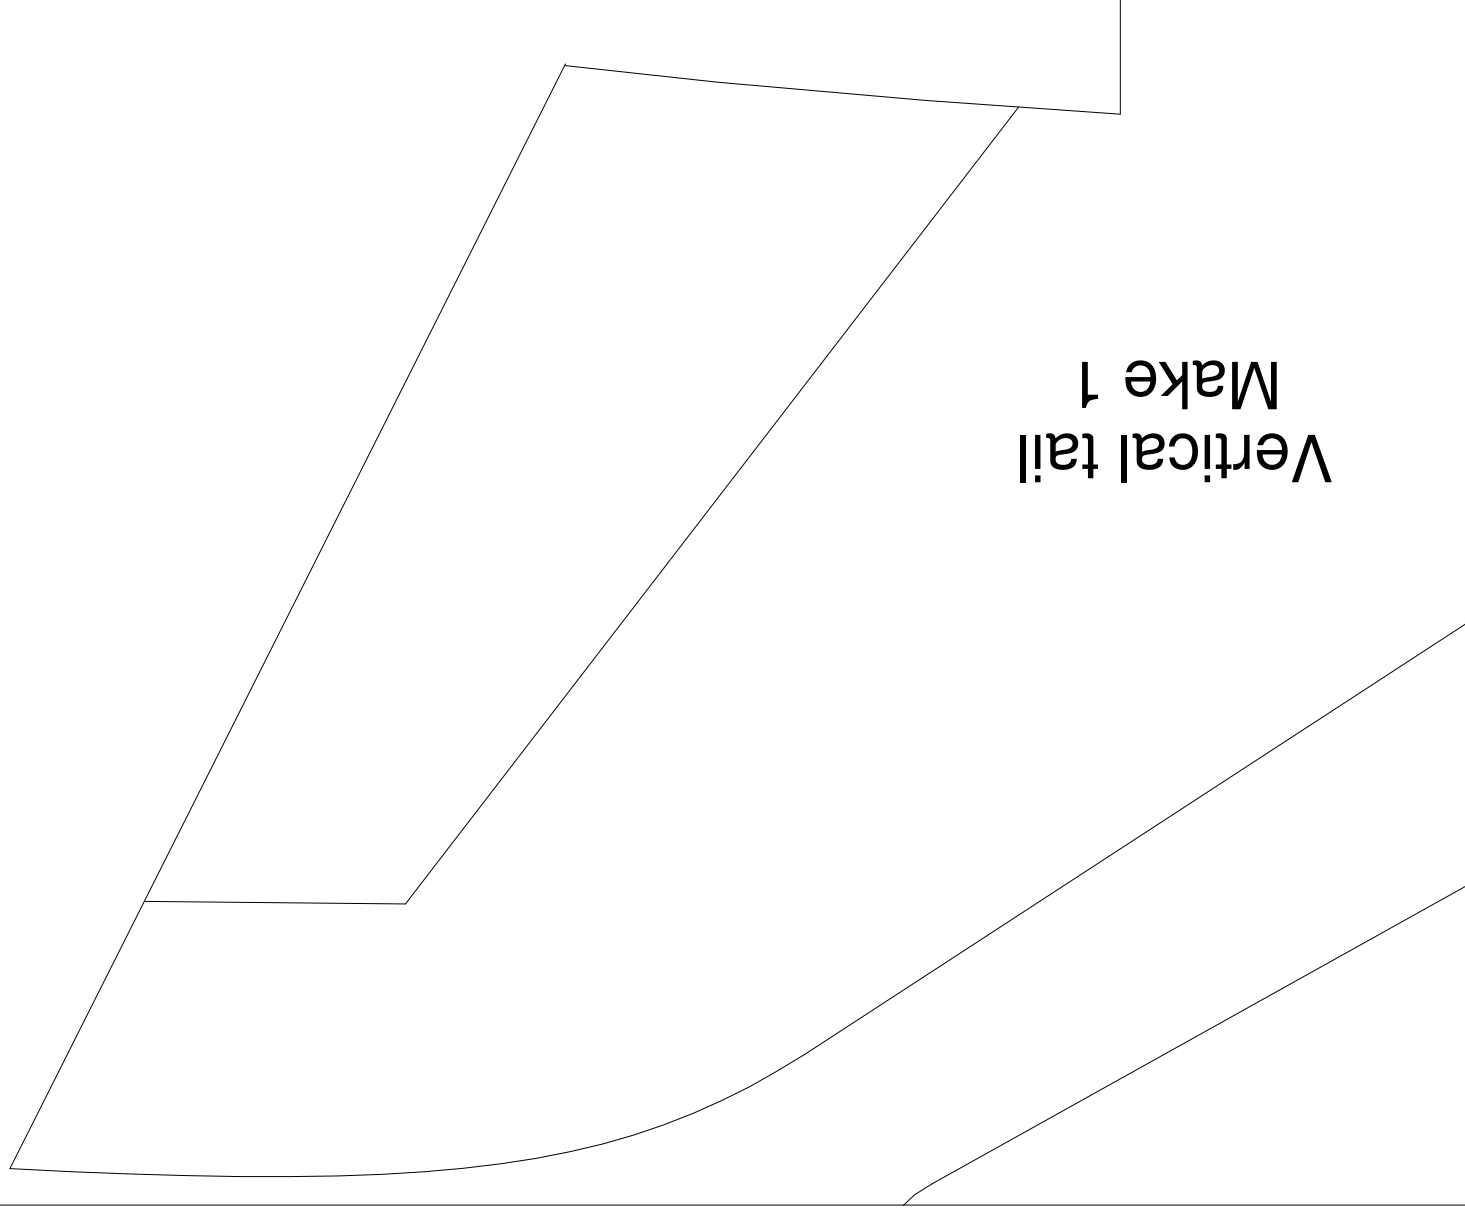

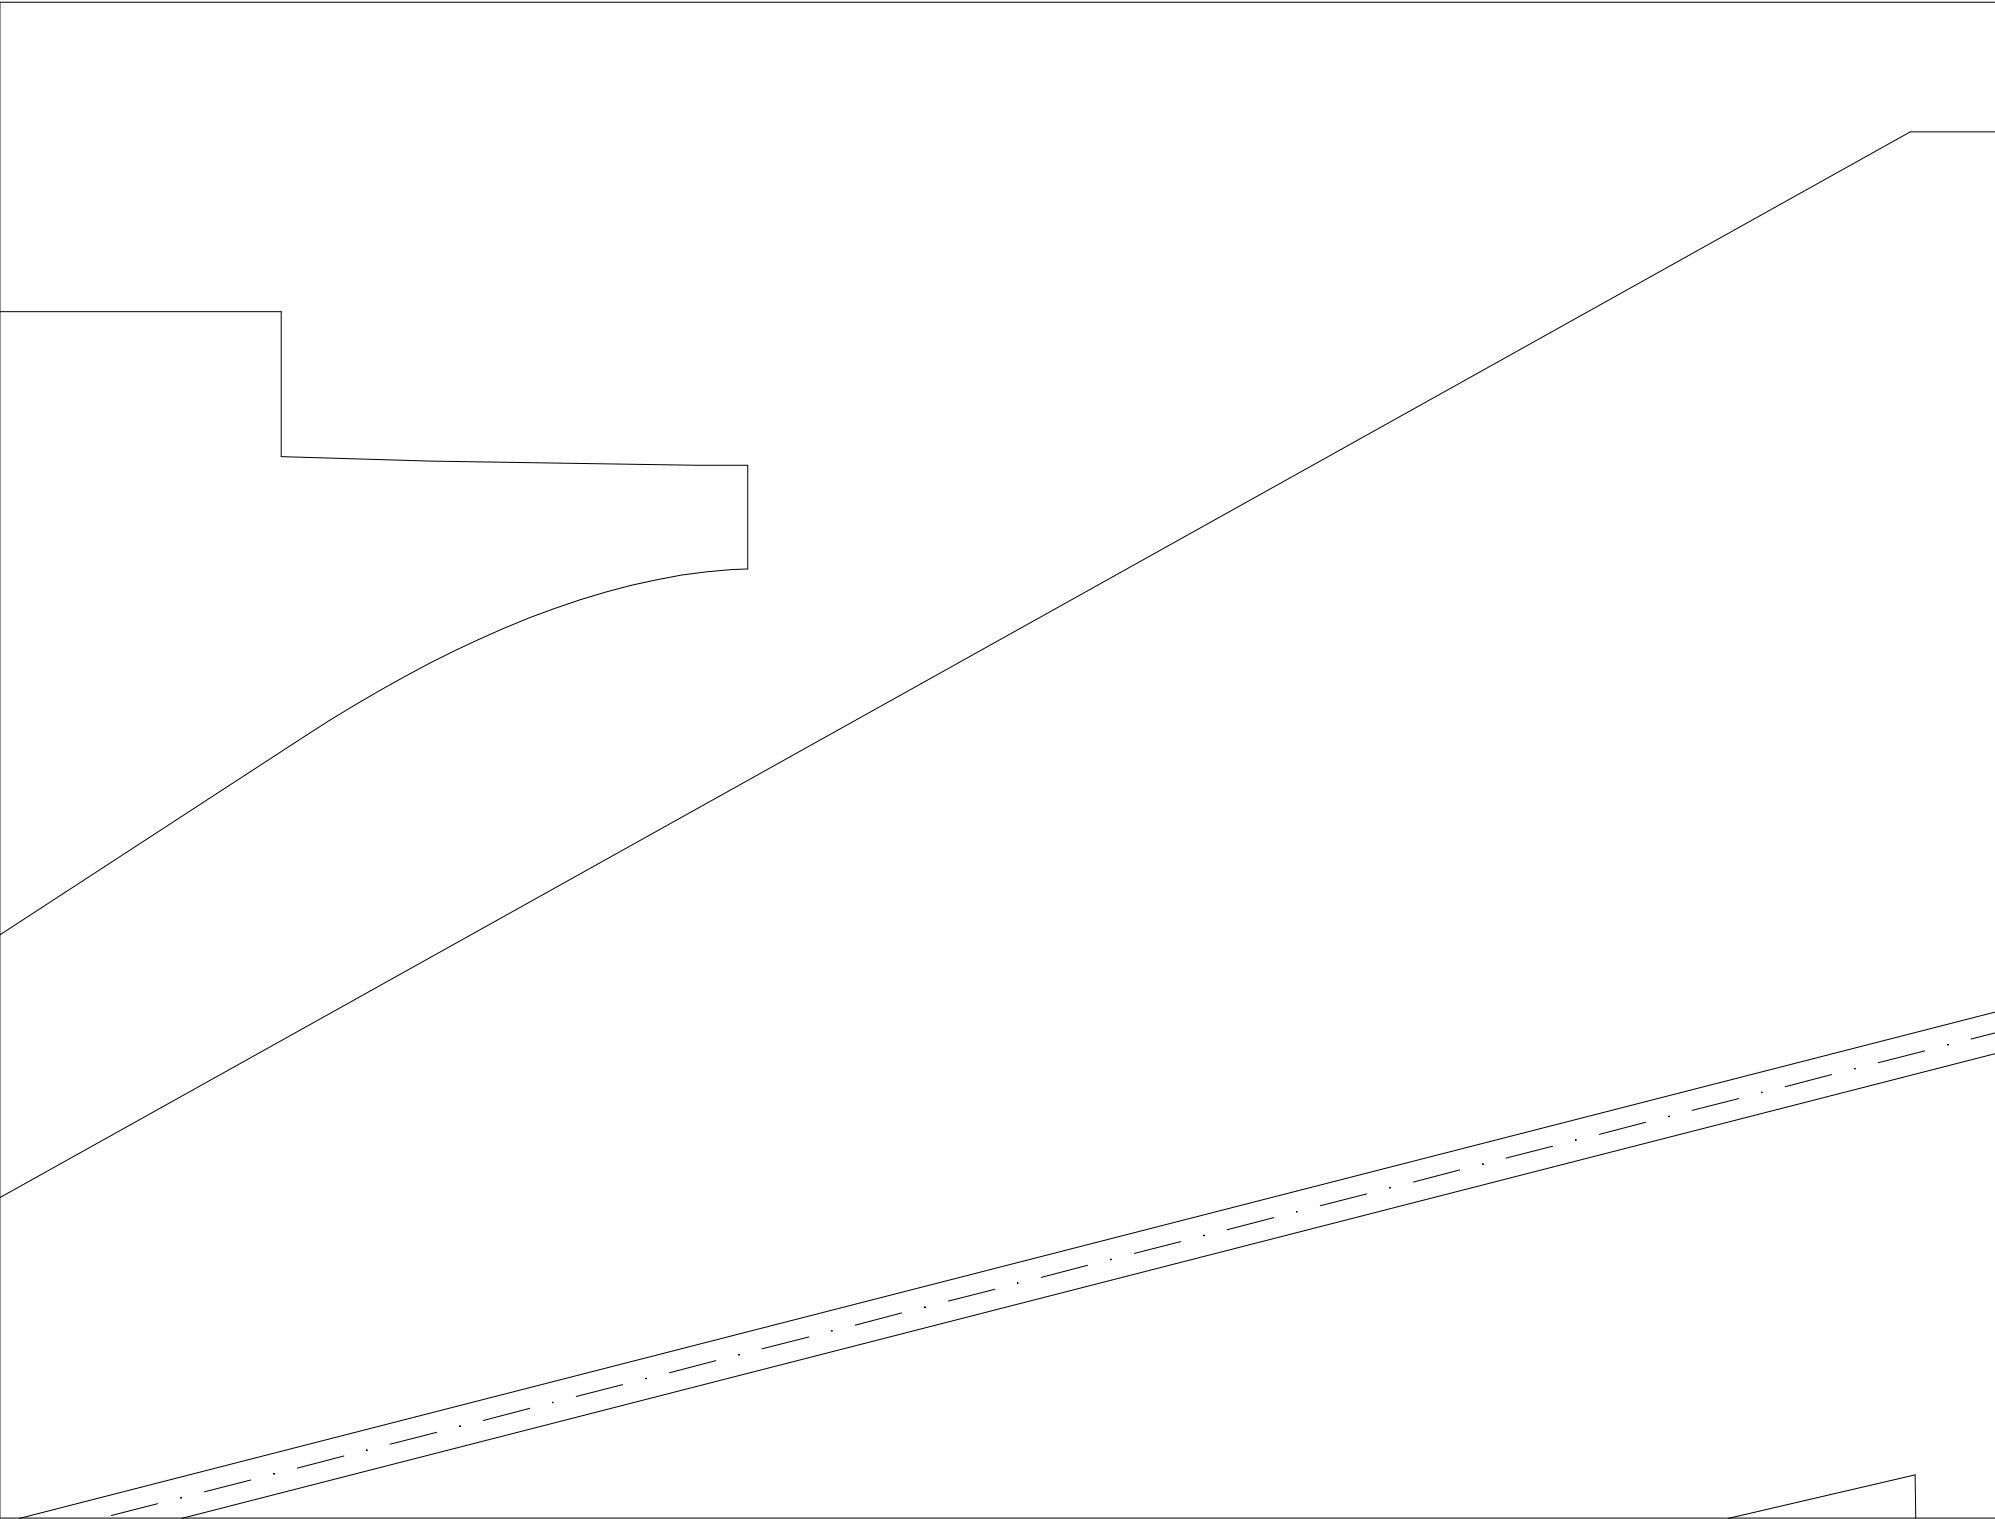

Wing Make 1

Spar joint doublers (top and bottom)
Make 2 from 1/32" ply
1" x 0.75"

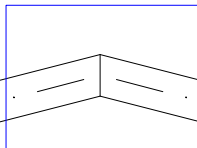

0.21" carbon tube spars

Super Bandit Park Jet

Designed by Steve Shumate

Copyright © 2005 All Rights Reserved

All parts made from 6 mm Depron or
BlueCore foam unless otherwise specified

