


Spar joint doublers (top and bottom)
Make 2 from 1/32" ply
1" x 0.75"


0.157" carbon tube spars



Fuselage/inlet top
Make 1

75% SCALED VERSION

Fuselage
M

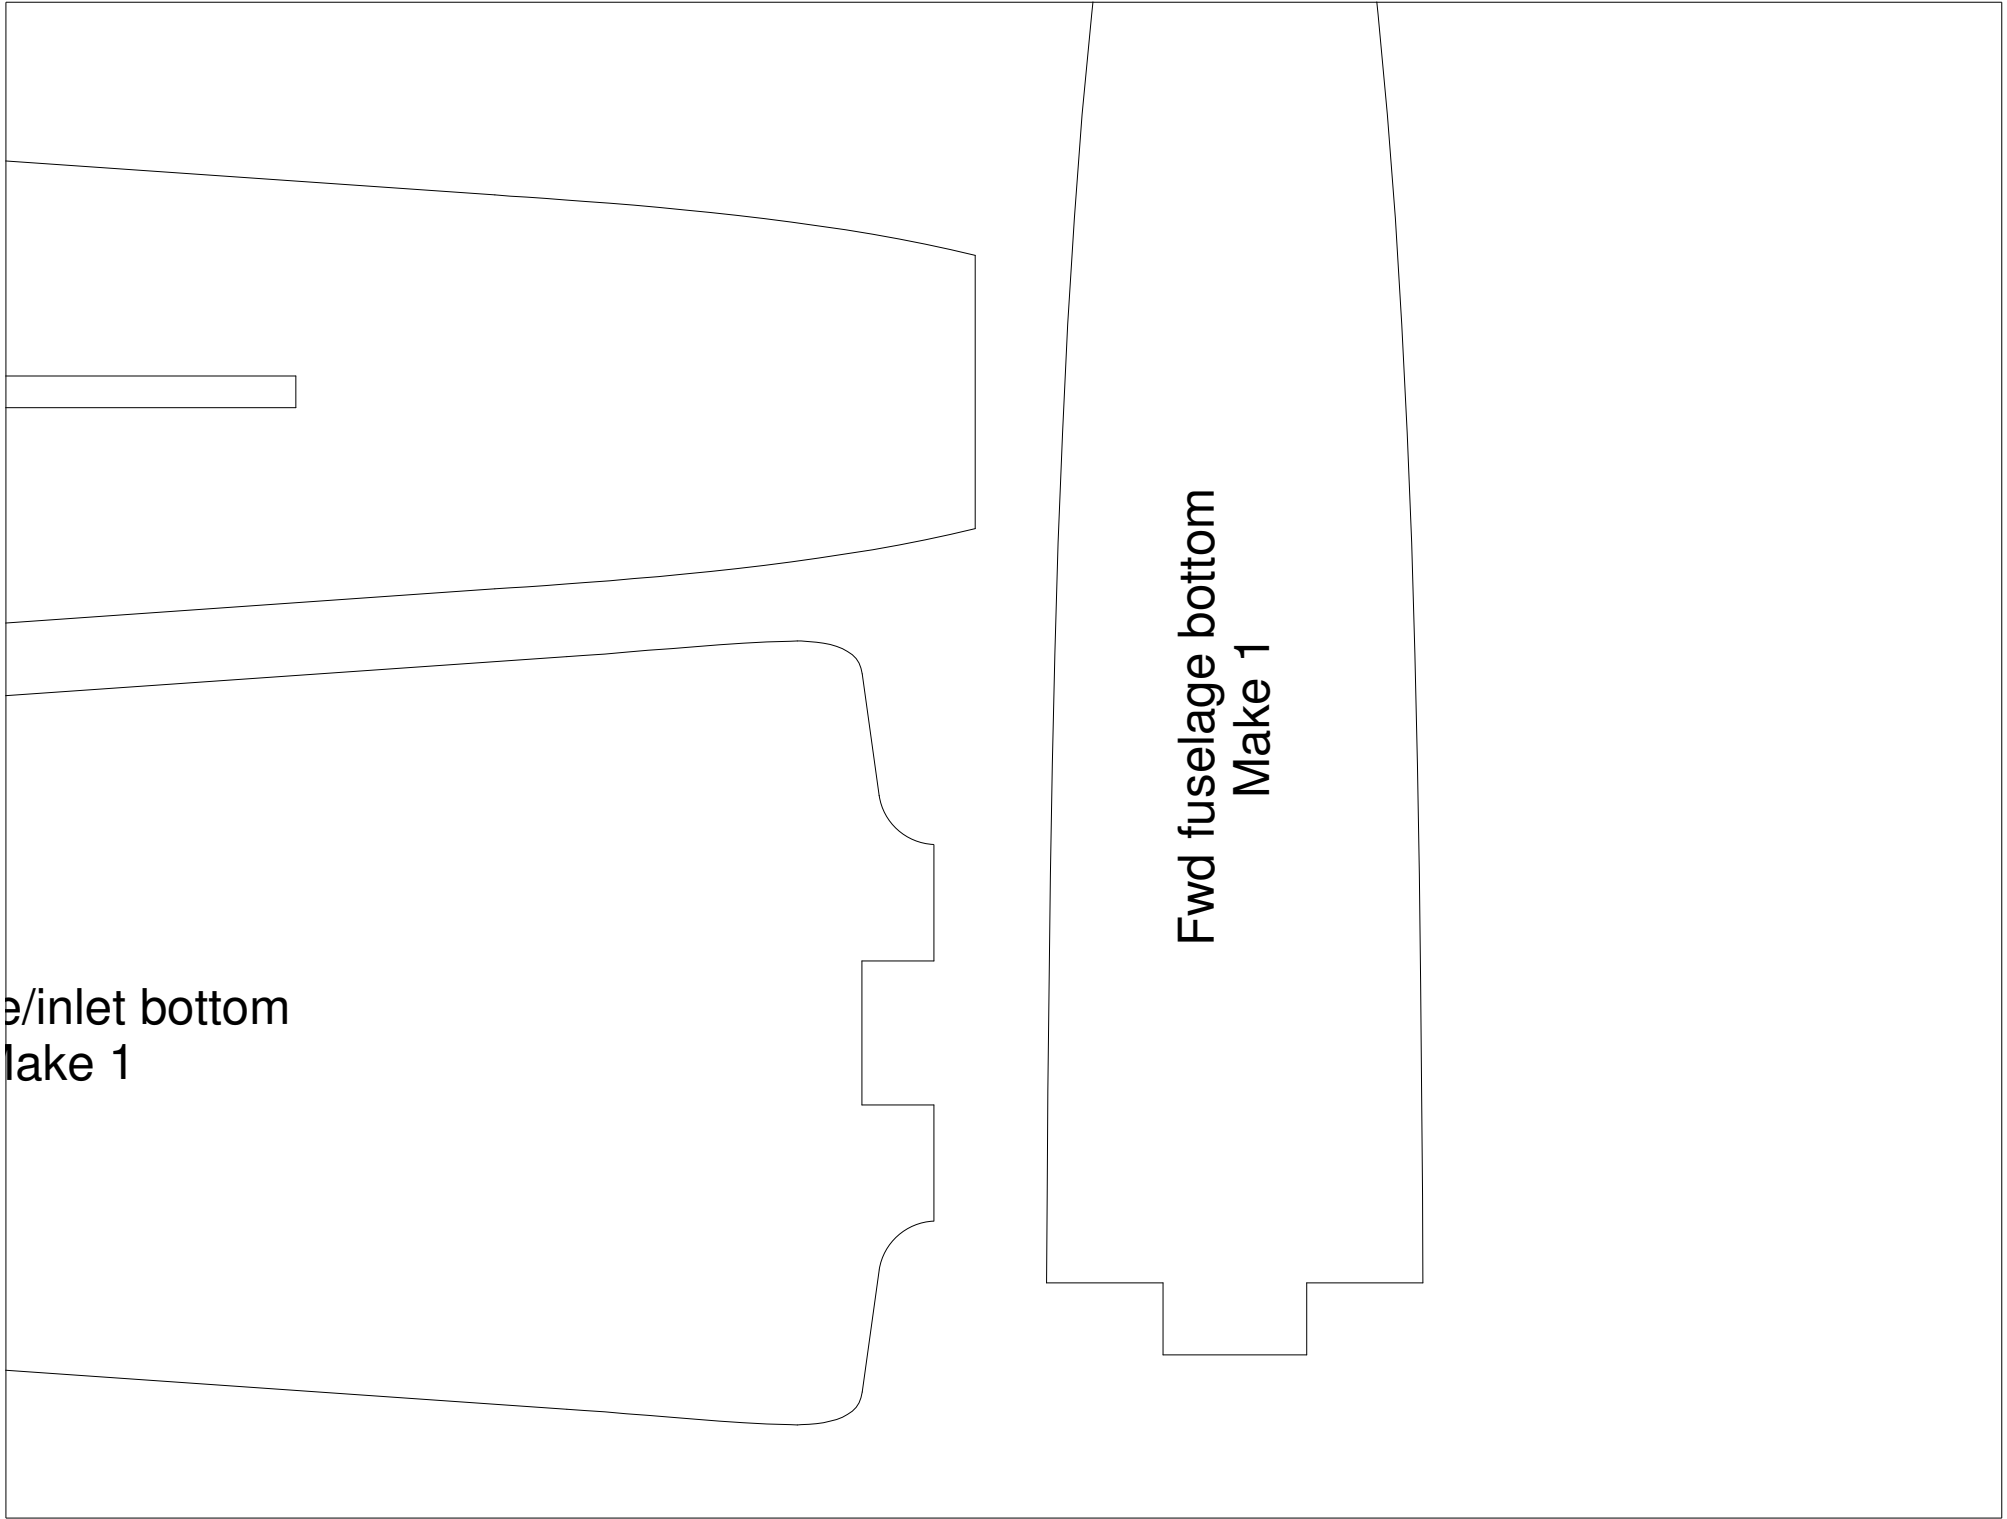


e/inlet bottom
lake 1

Fwd fuselage bottom
Make 1

Make 1




Bulkhead F-2
Make 1

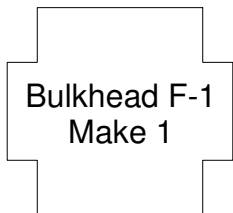

Bulkhead F-1
Make 1

Wing root fillets
Make 2



Horizontal tail
Make 1

Fwd Fuselage Top
Make 1

Canopy sill p

3/8" wide foam strip

F-2

F-1

Canopy
(make 10 and
laminate together)

Turtle deck top
Make 1

iece - Make 2

Fwd Fuselage Sides
Make 2

F-3


3/8" wide foam strip

3/8" wide foam strip

3/8" wide foam strip

Fuselage/Inlet Sides
Make 2

3/8" wide foam strip

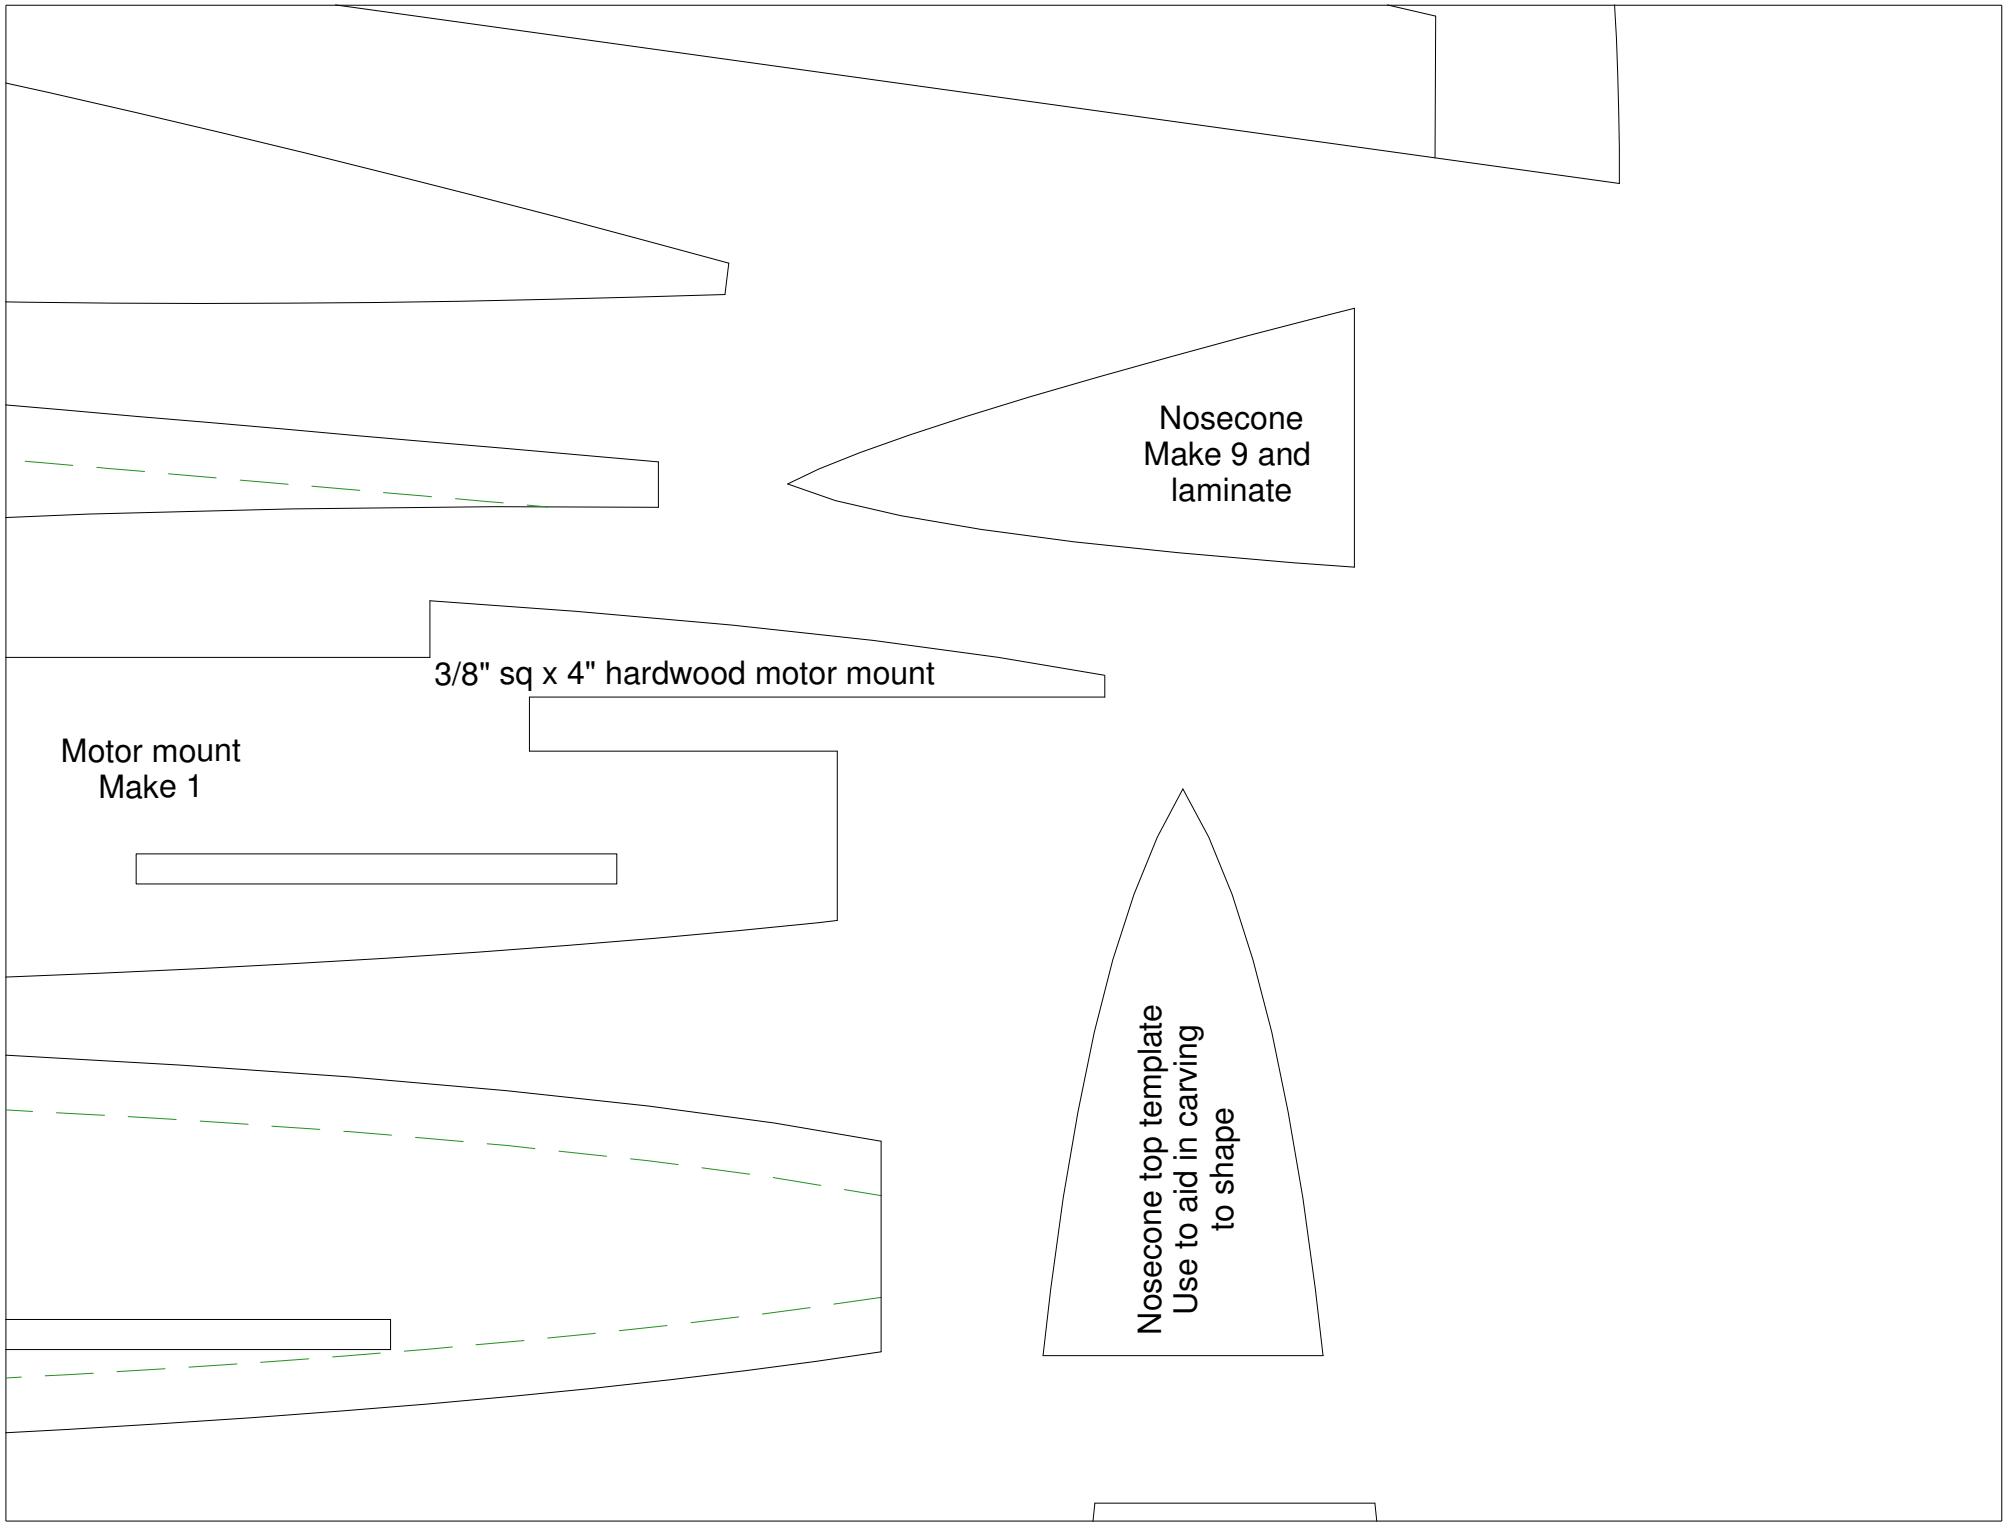


Nosecone
Make 9 and
laminate

3/8" sq x 4" hardwood motor mount

Motor mount
Make 1

Nosecone top template
Use to aid in carving
to shape

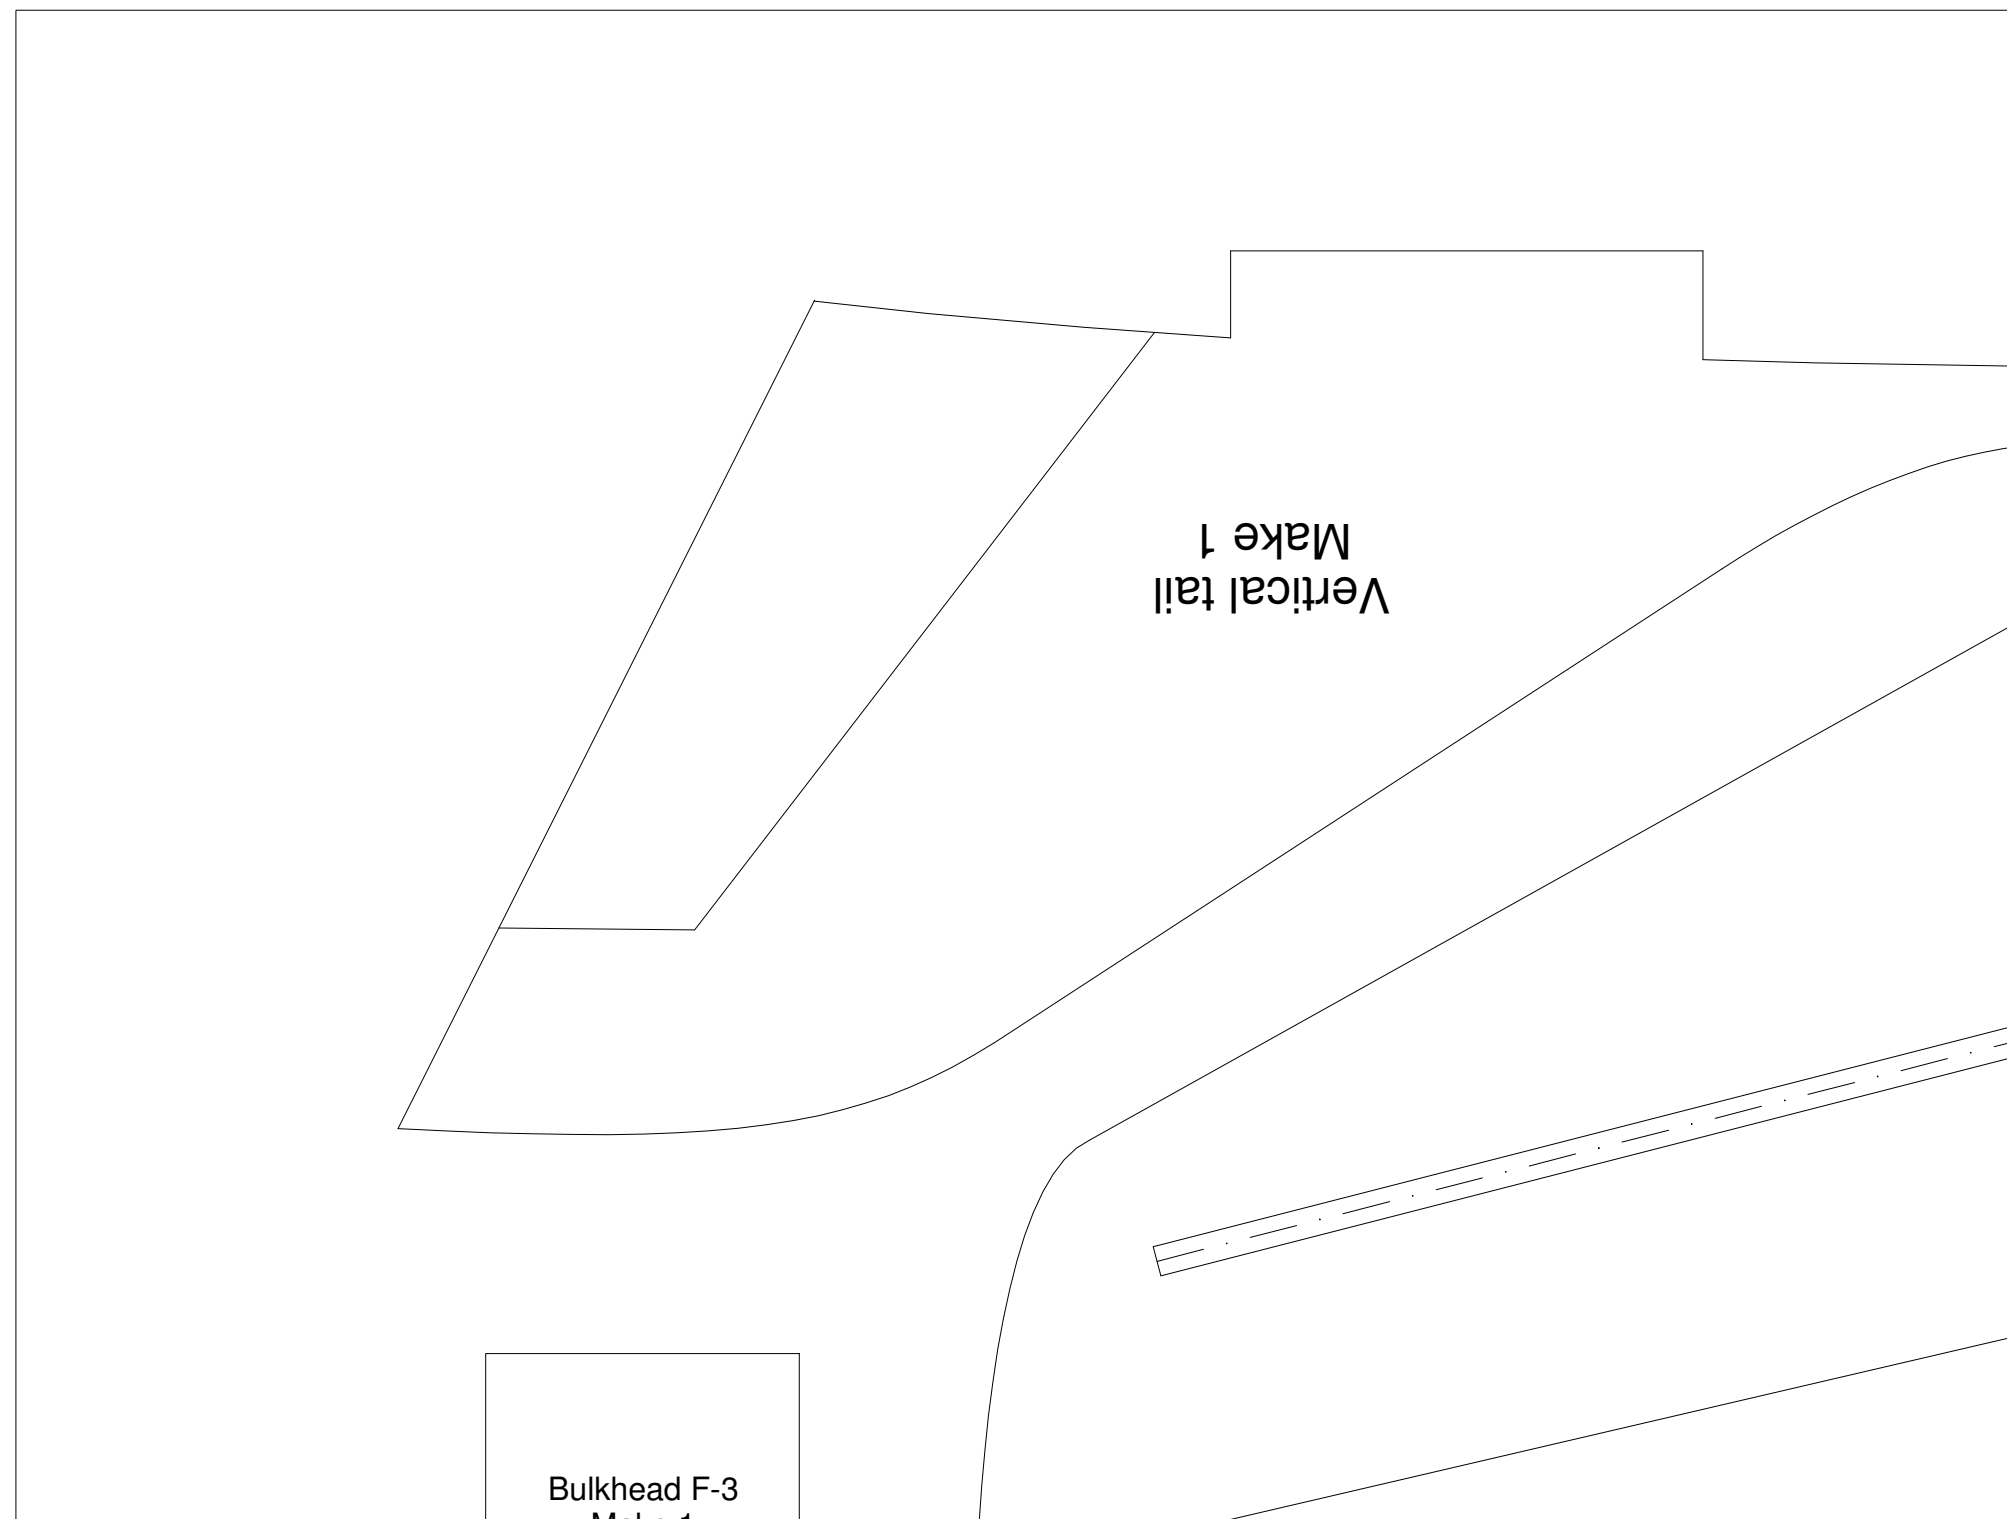


Vertical tail
Make 1

Bulkhead F-3
Make 1

Wing Make 1

Spar joint doublers (top and bottom)
Make 2 from 1/32" ply
1" x 0.75"

0.21"

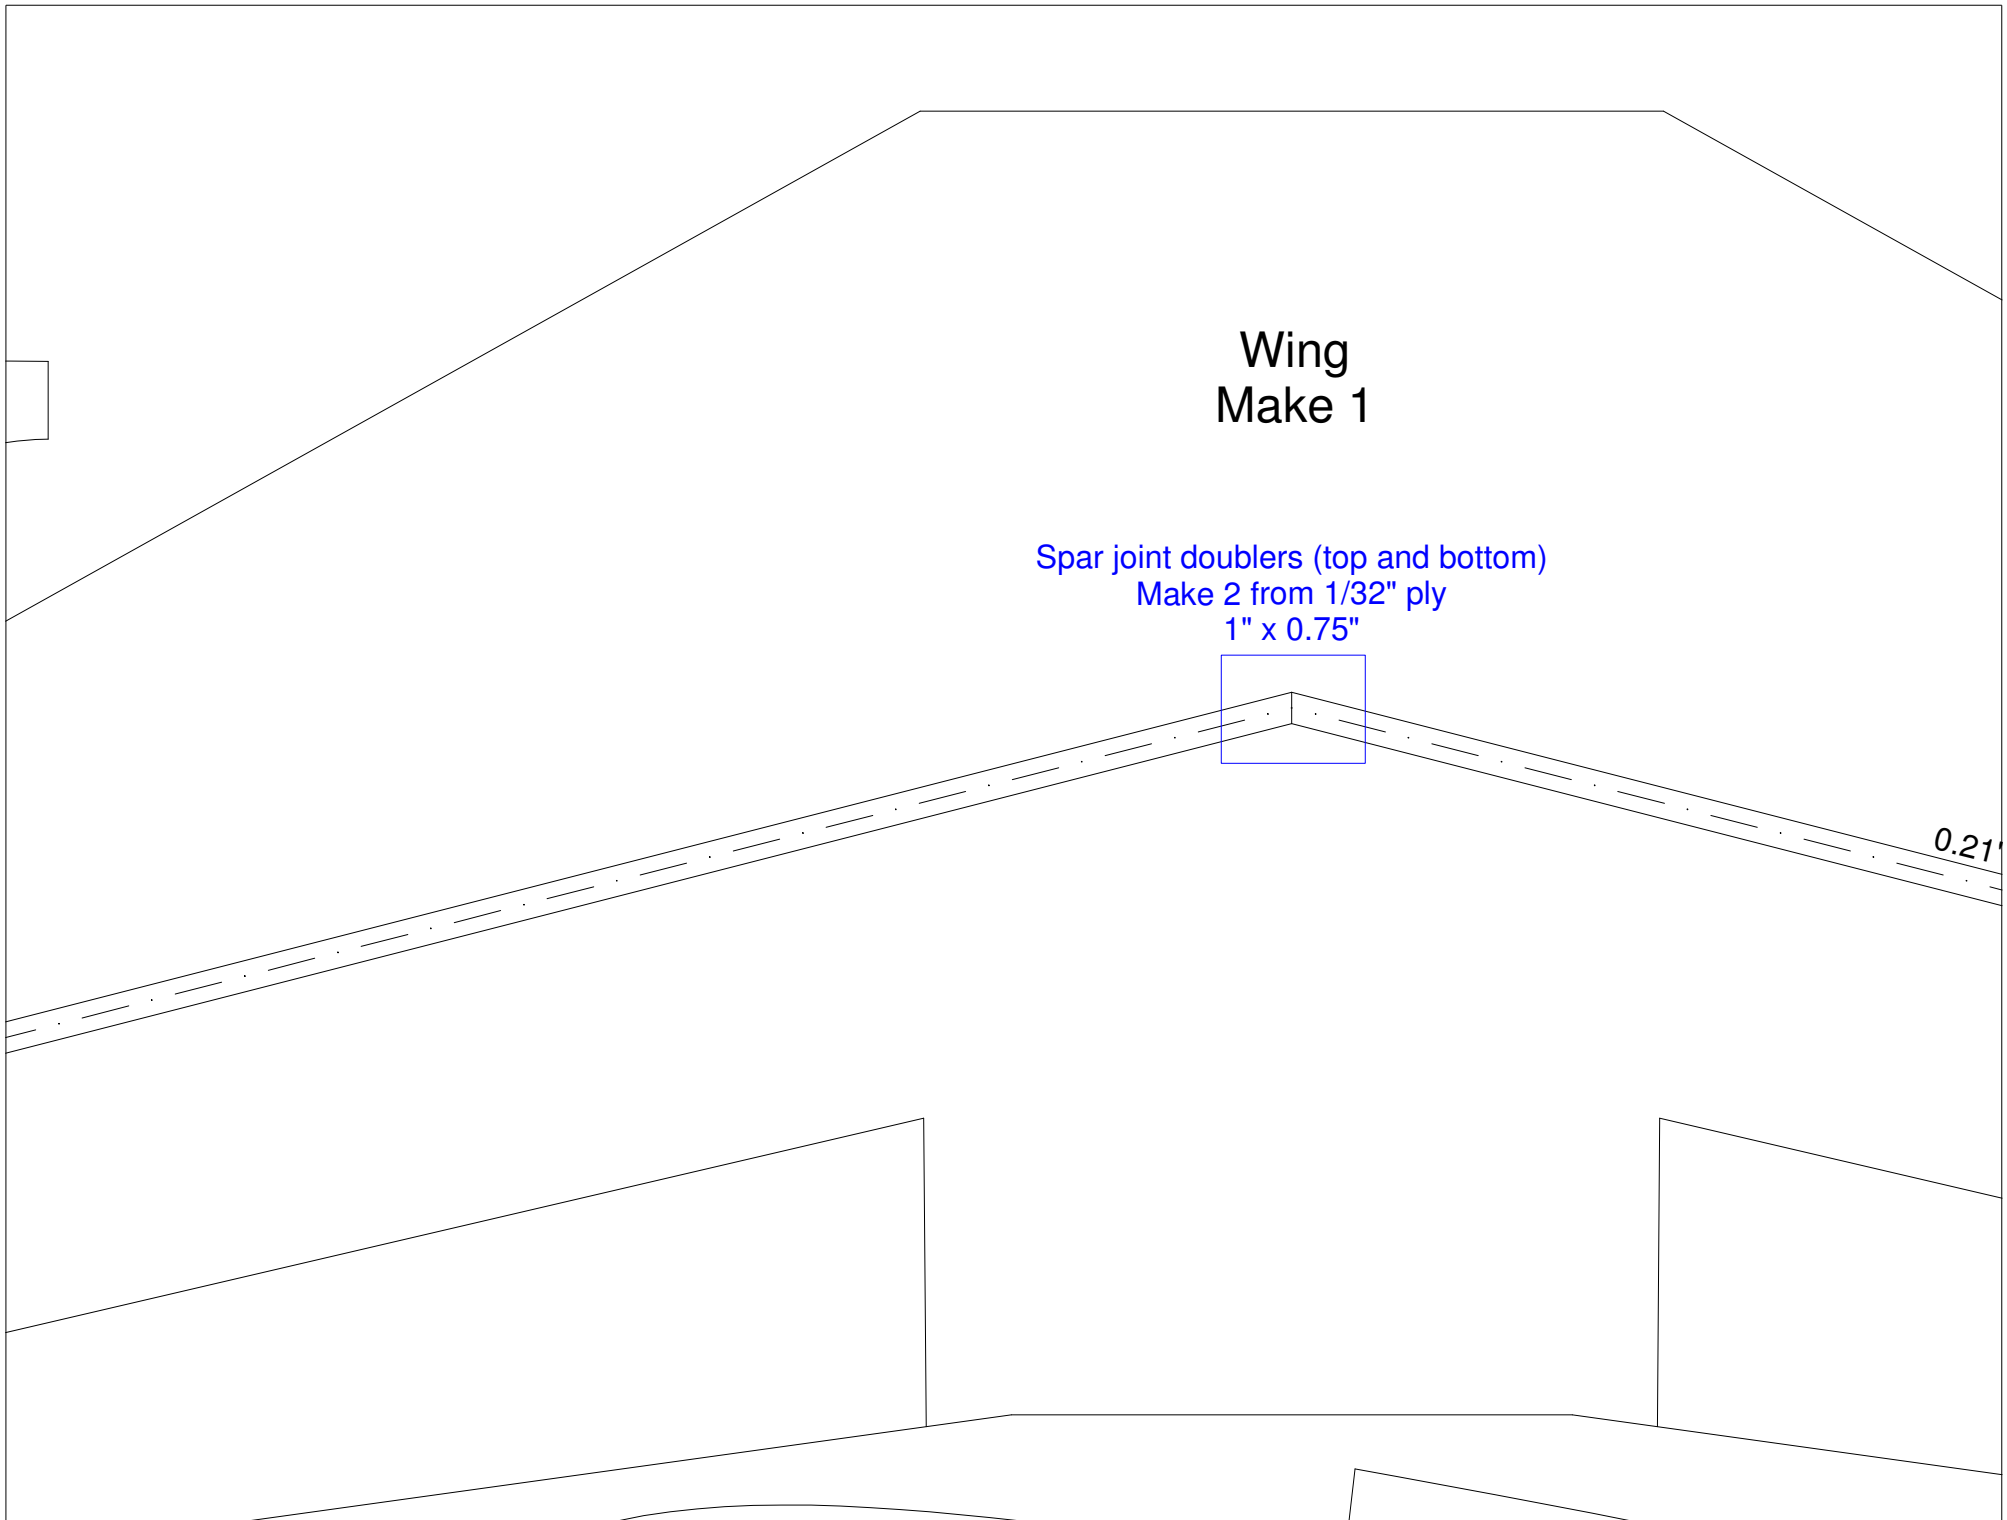

Super Bandit Park Jet

Designed by Steve Shumate

Copyright © 2005 All Rights Reserved

***All parts made from 6 mm Depron or
BlueCore foam unless otherwise specified***

"carbon tube spars

