



Aileron
Mount
Make

MG-21 1/13

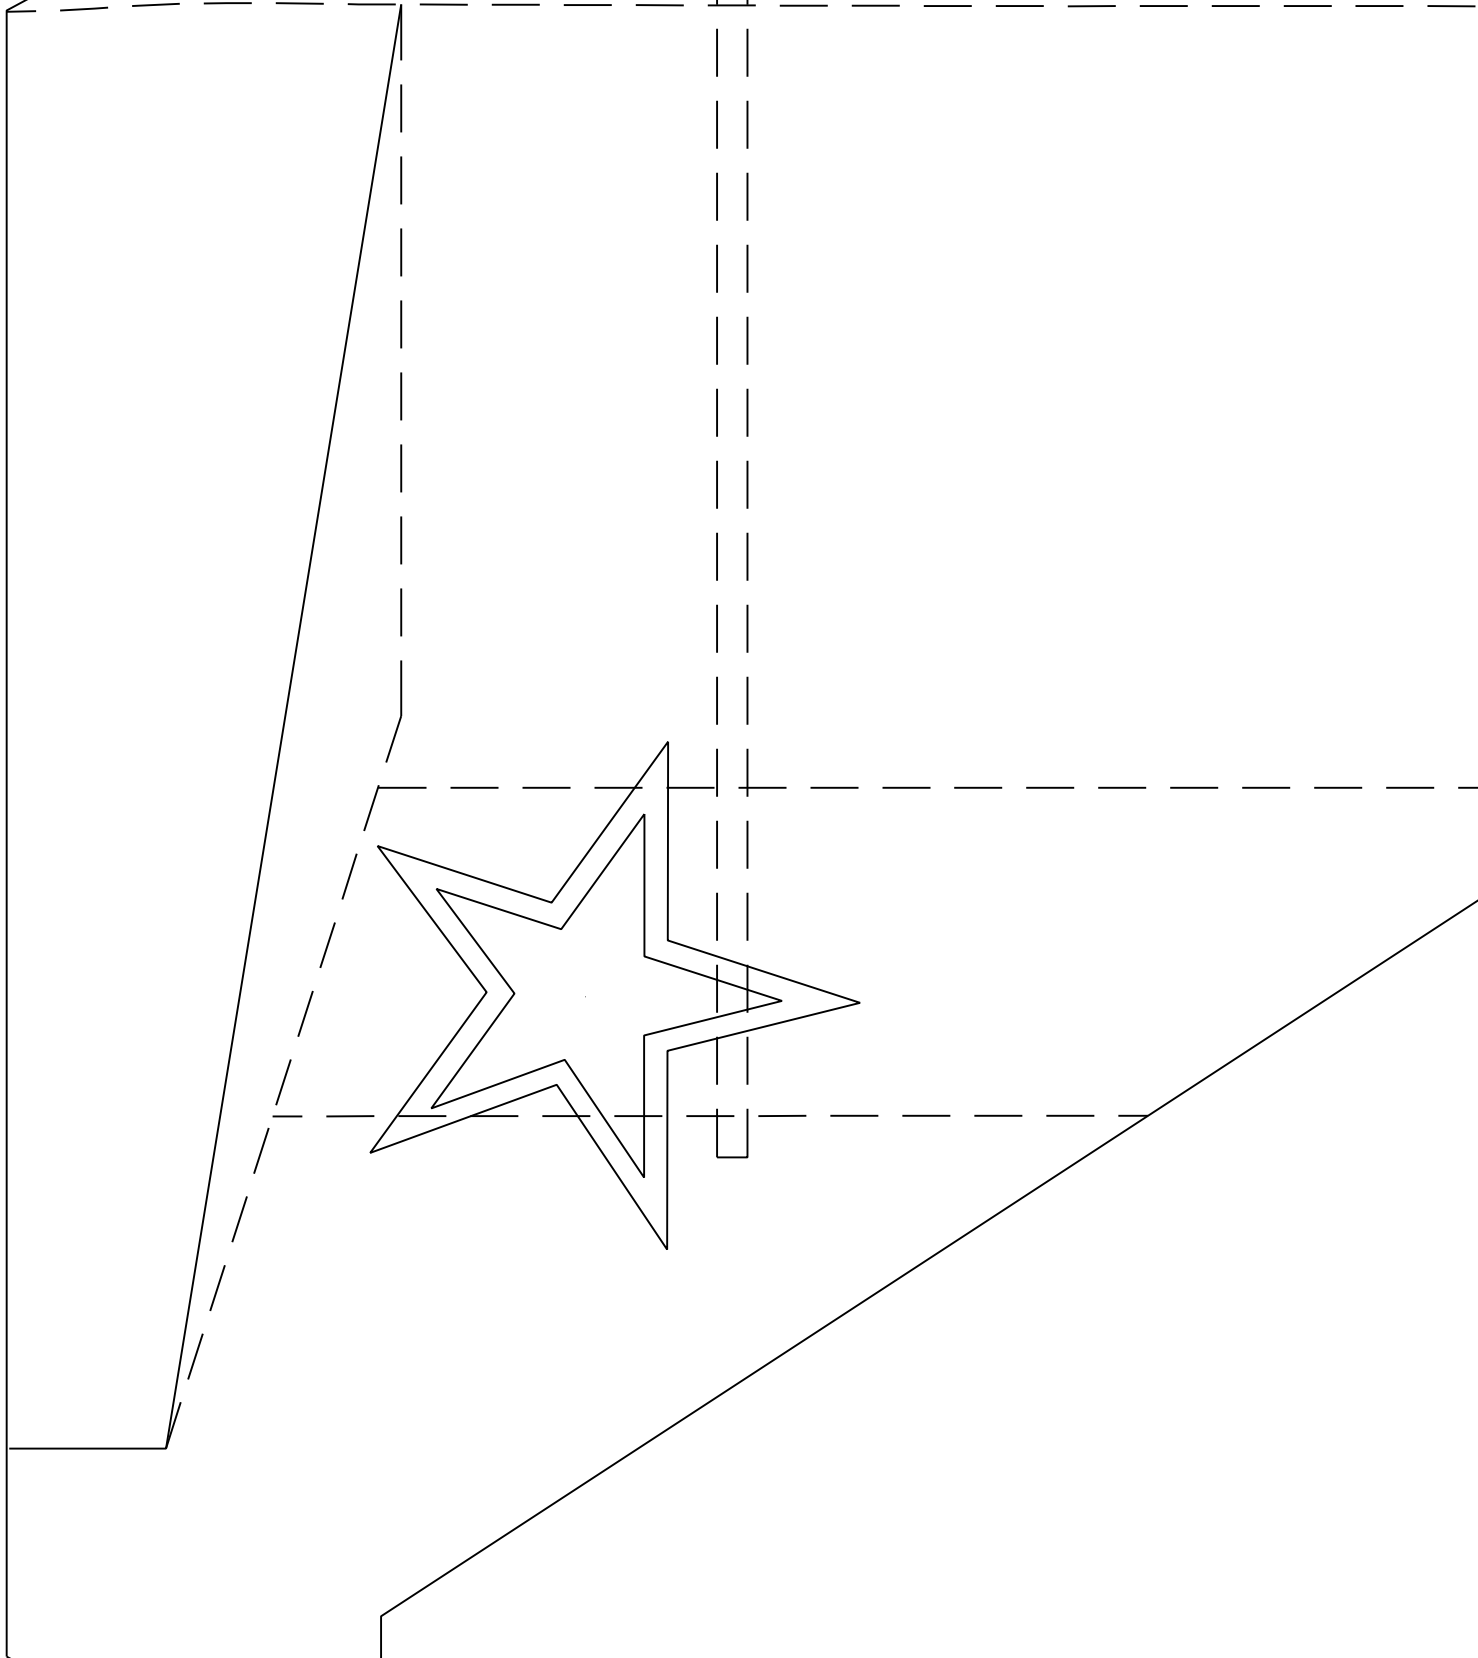

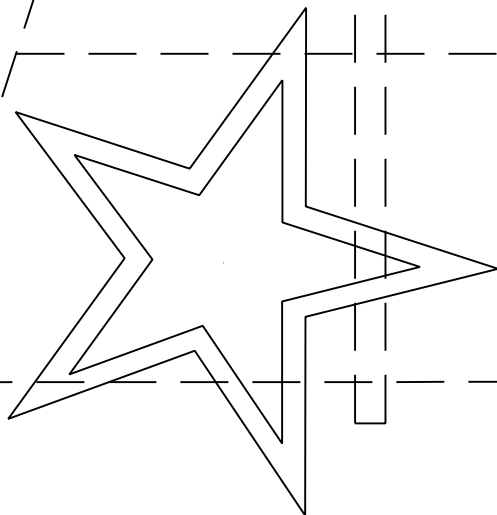

h Servo

2


3




Front


Right Top Fuse Between
Bulkhead 6 & 7
Make 1
MG-21 1/13th

Fin

Forward Nose
Make 1
MG-21 1/13th

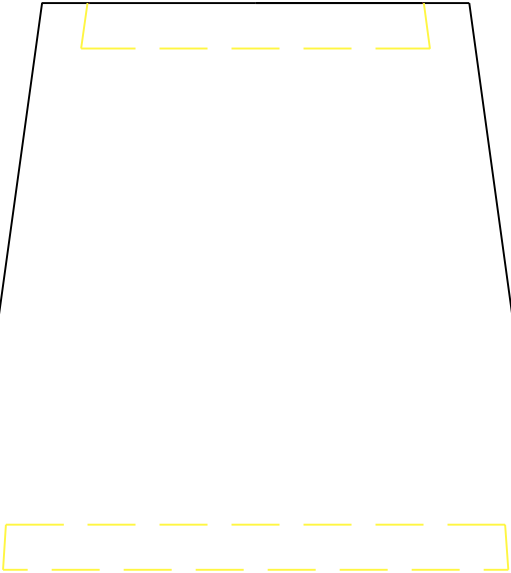

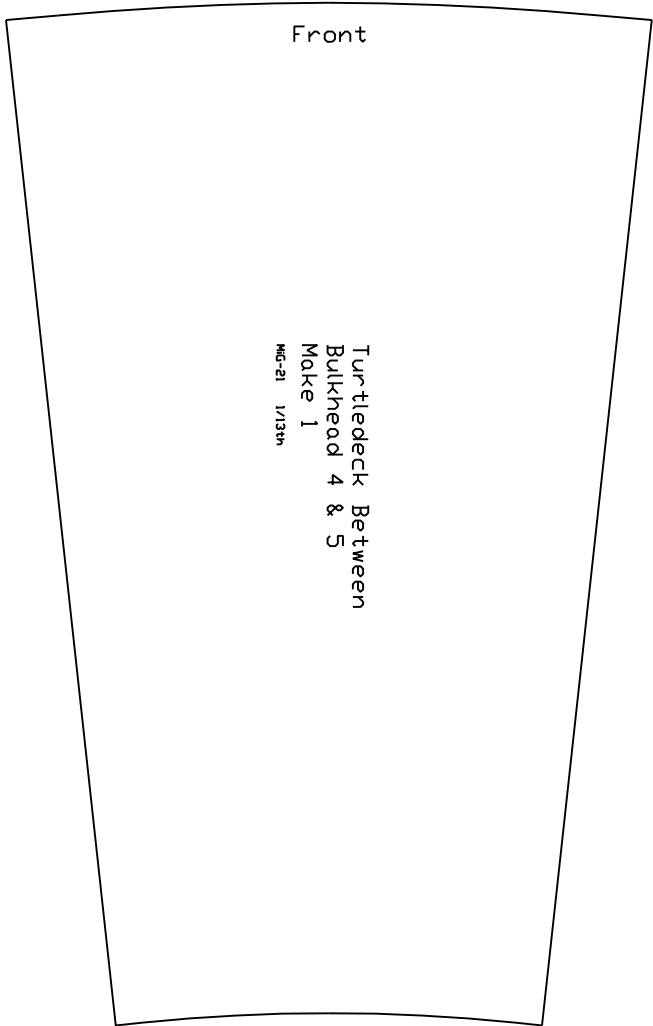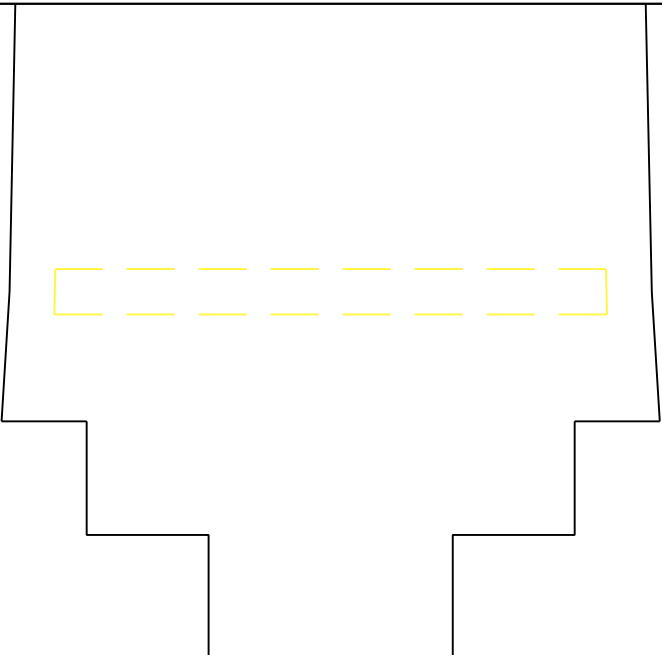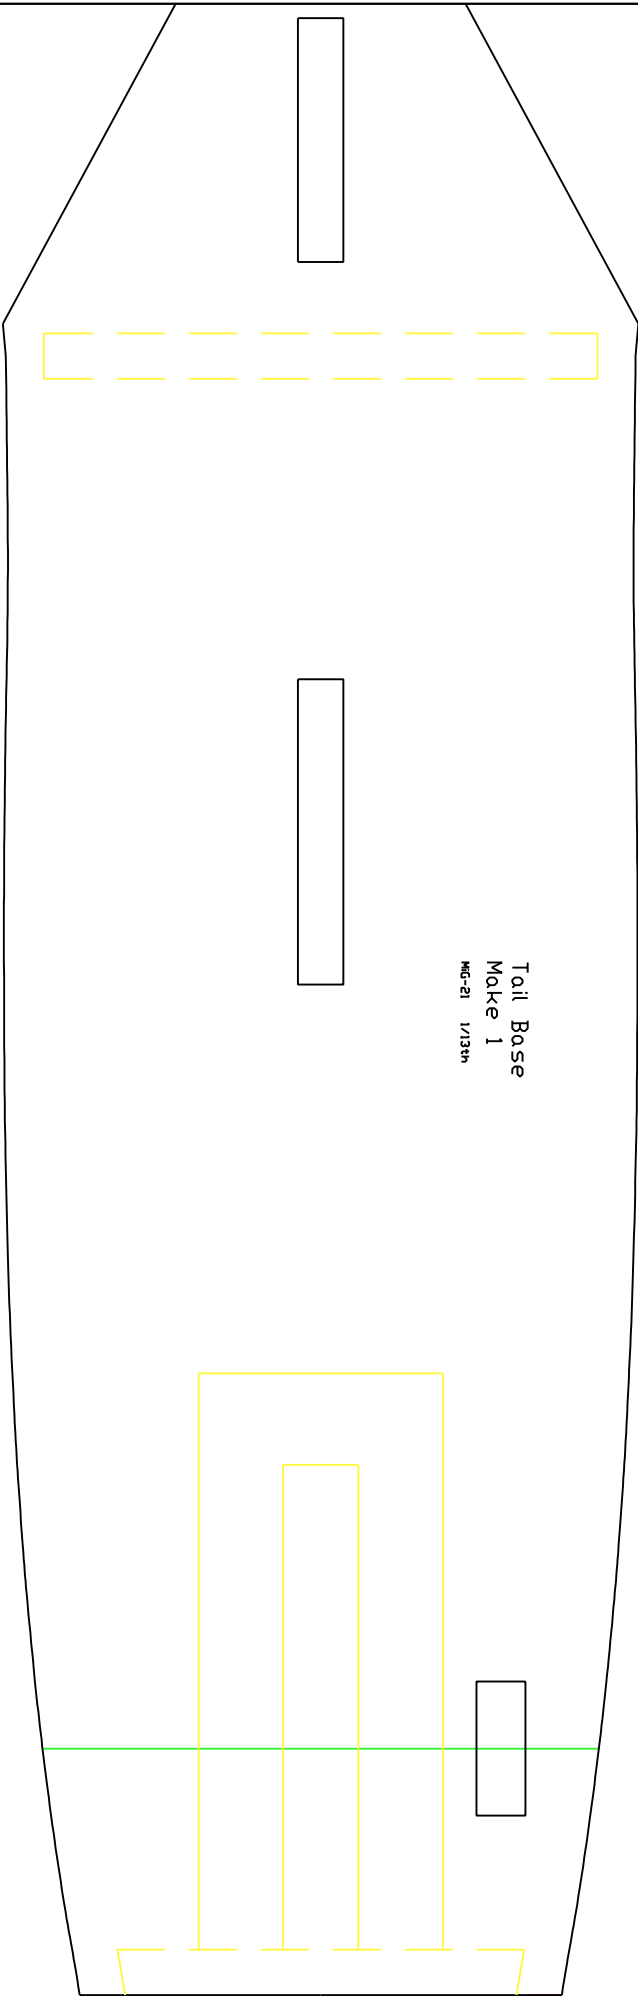





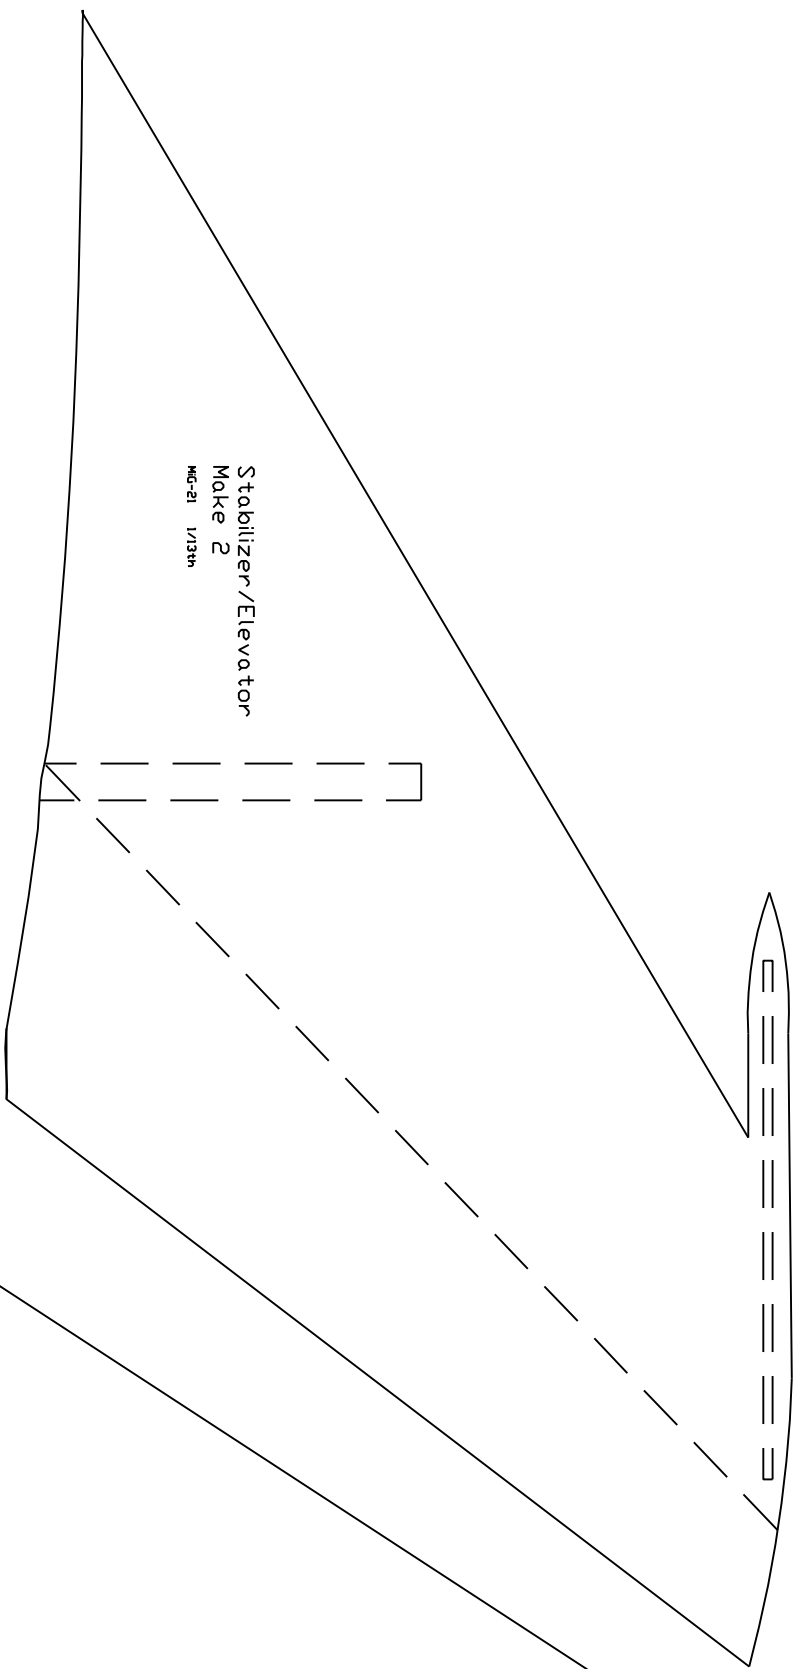


Stabilizer/Elevator
Make 2
MG-21 1/13th


Top Bulkhead 6
Make 1
MG-21 1/13th

Bottom Bulkhead 6
Make 1
MG-21 1/13th



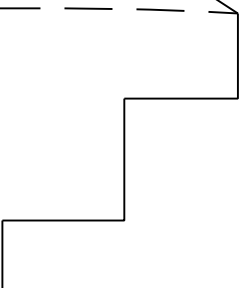


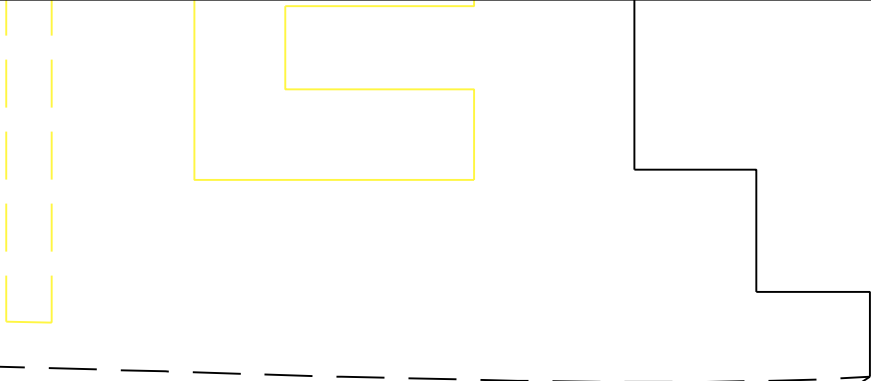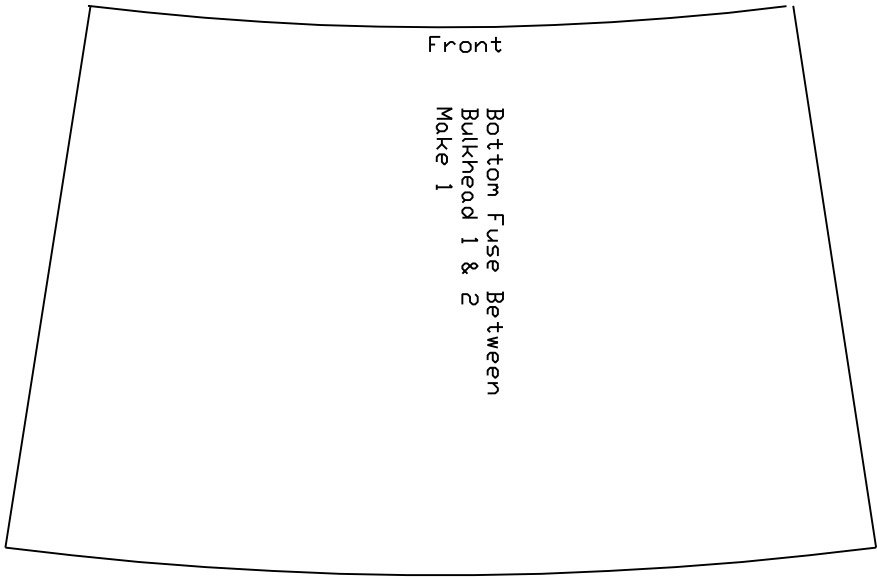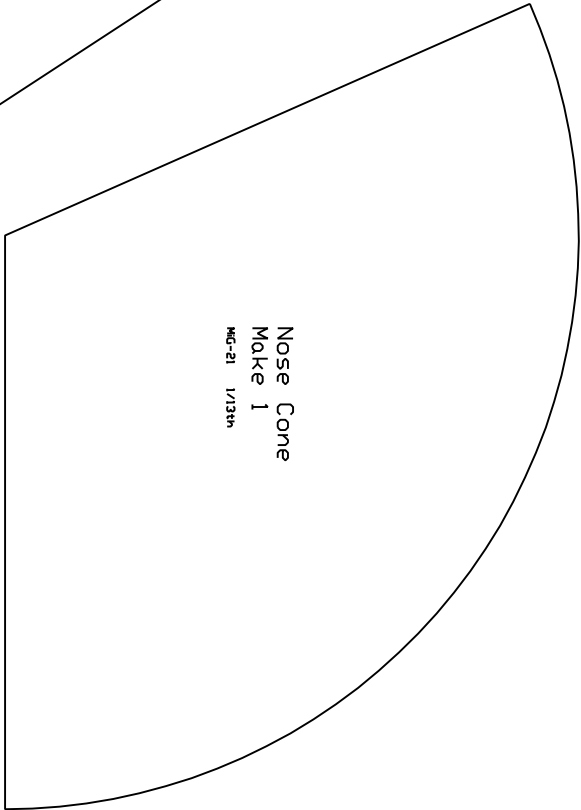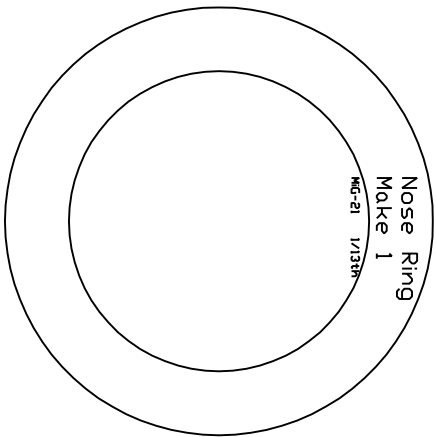


MG-21 1/13th




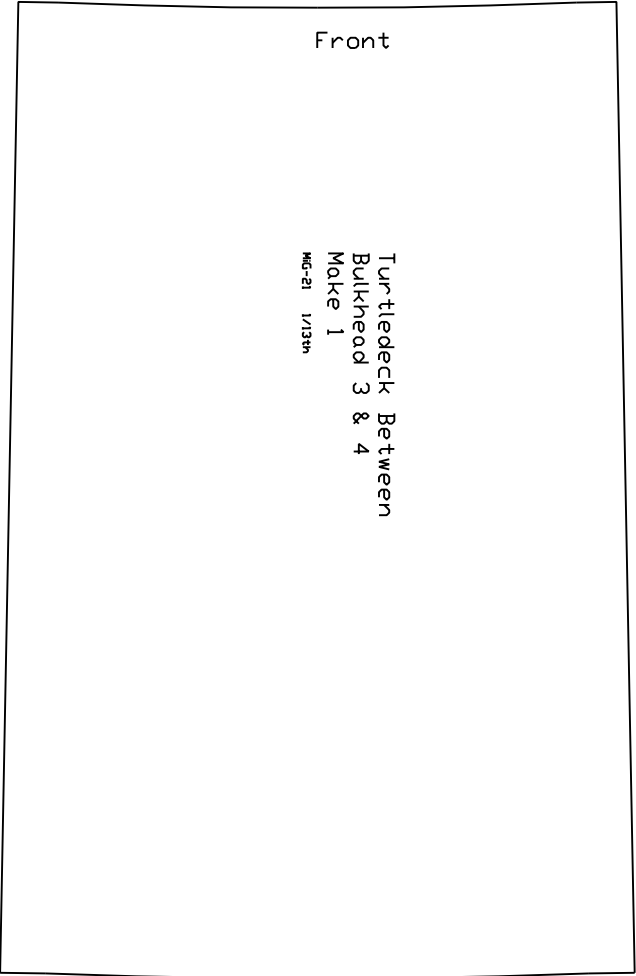


Aft Mid-Fuse
Accent
Make 2
MIG-21 1/13th

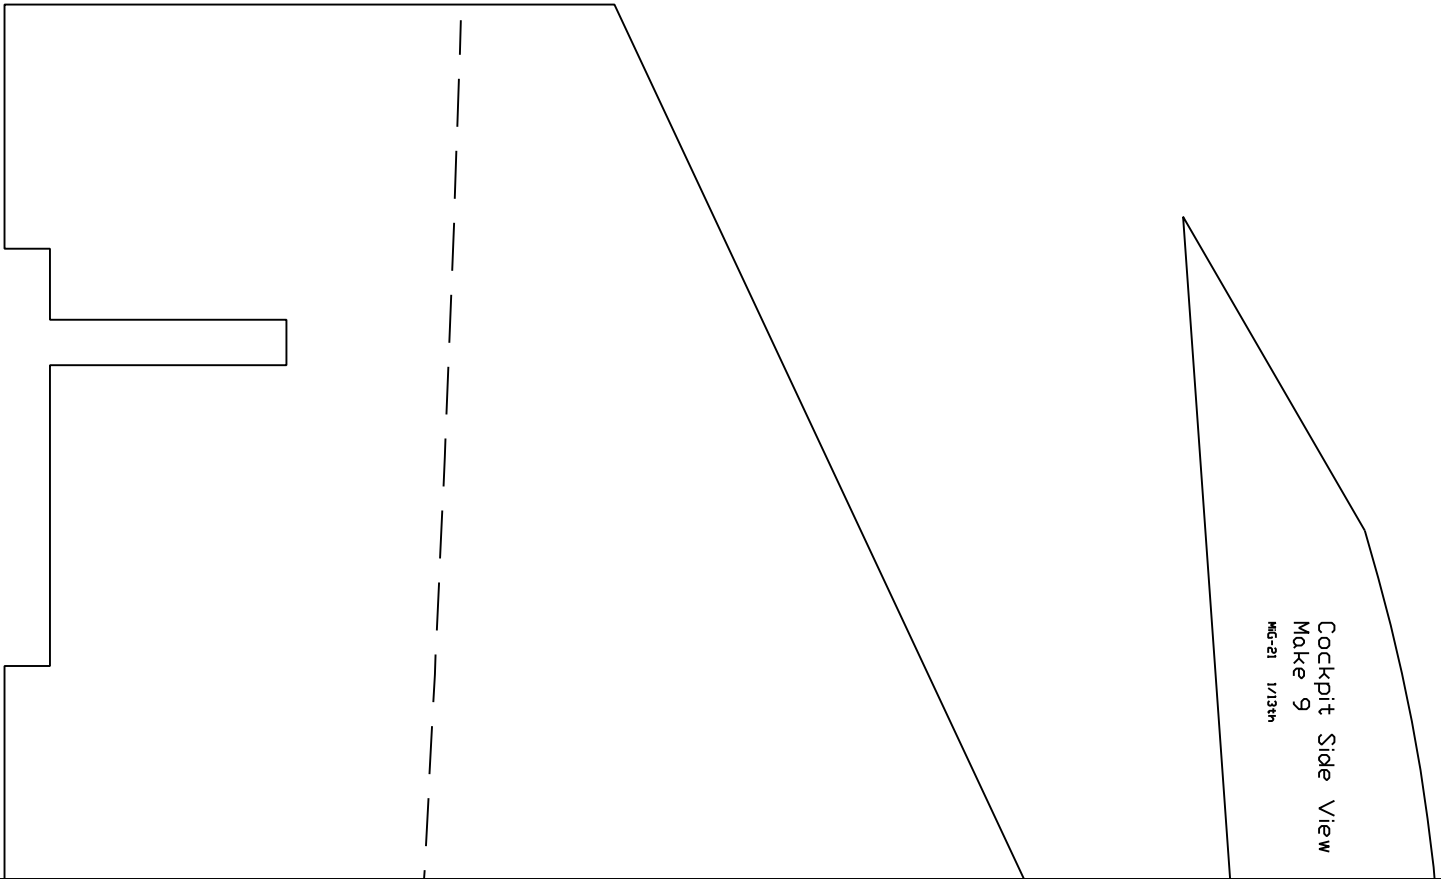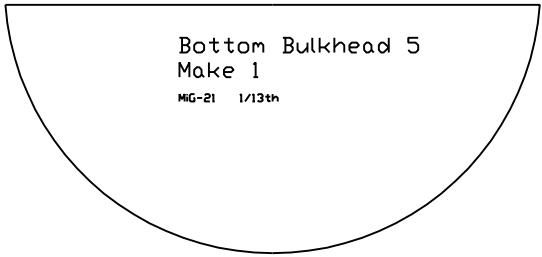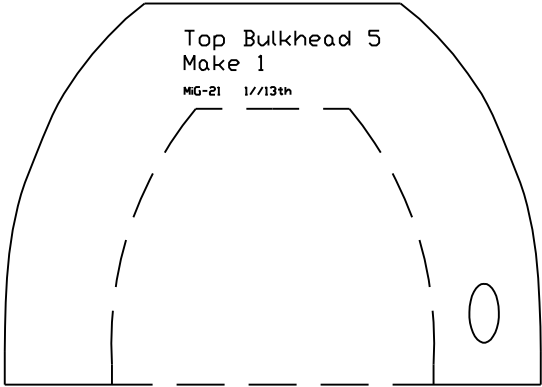

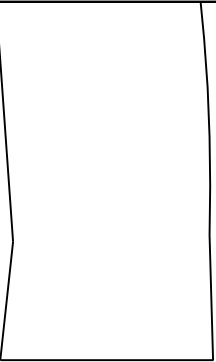

Fin
Make 1
MG-21 1/13th

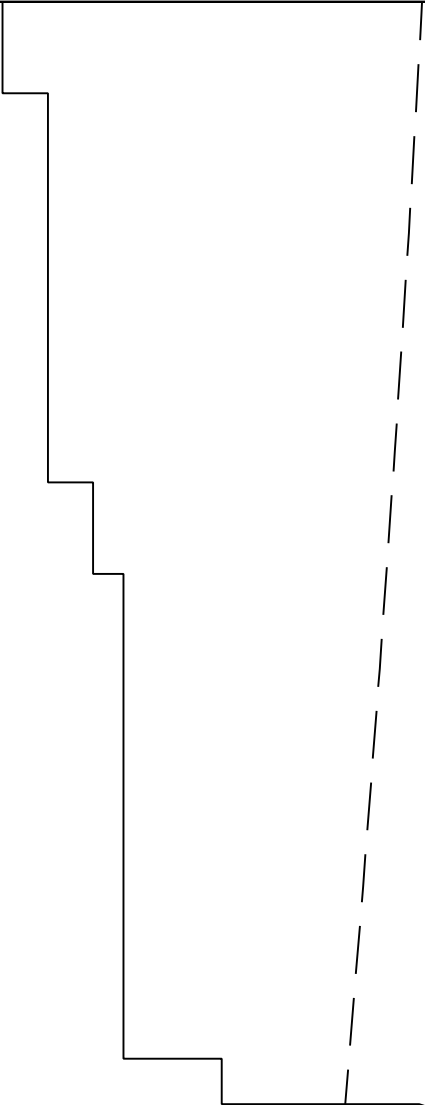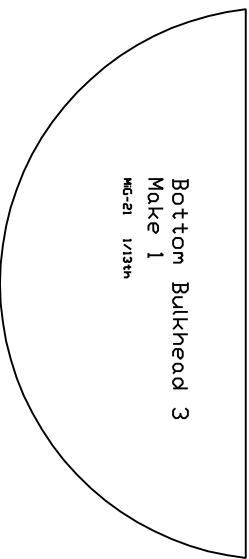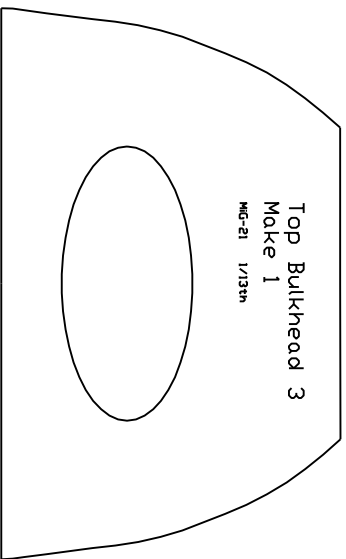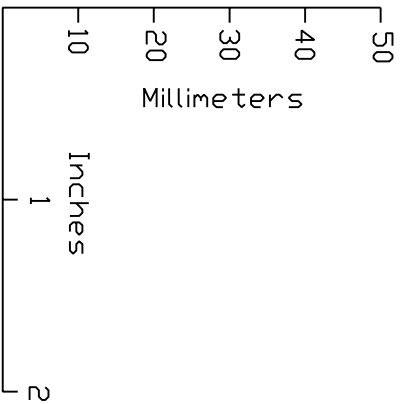

Aft Fuse Accent
Make 4
MG-21 1/13th

Front

Top Fuse Between
Bulkhead 2 & 3
Make 1
MG-21 1/13th

Dorsal Fin
Make 1
MG-21 1/13th

Front

Bottom Fuse Between
Bulkhead 2 & 3
Make 1
MG-21 1/13th

Front

Top Fuse Between
Bulkhead 3 & 4
Make 1
MG-21 1/13th






Front

Turtleneck Between
Bulkhead 5 & 6
Make 1

MG-21 1/13th

Front

Top Fuse Between
Bulkhead 1 & 2
Make 1
MG-21 1/13th

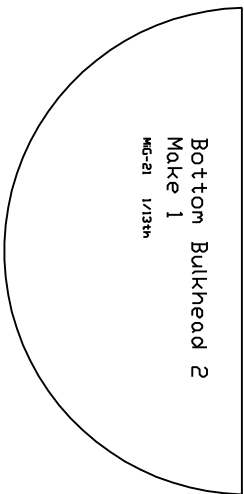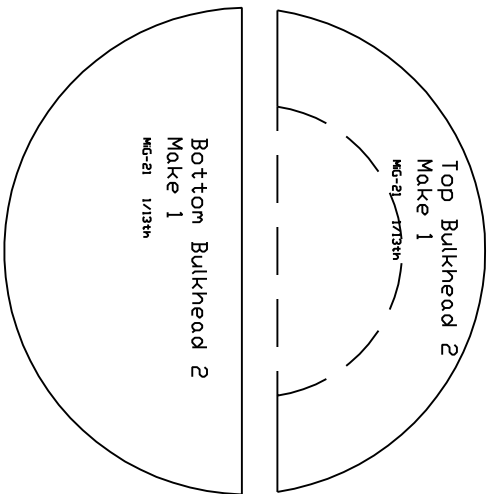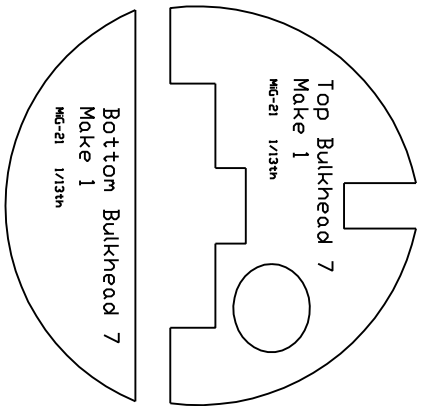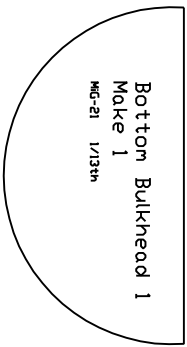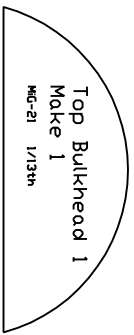

Bottom Fuse Between
Bulkhead 4 & 5
Make 1
MIG-21 1/13th

Front

Front

Bottom Fuse Between
Bulkhead 3 & 4
Make 1
MIG-21 1/13th

Fin Accent
Make 2
MIG-21 1/13th

Mid-Fuse Accent
Make 2
MIG-21 1/13th

Wing Fairing
Make 2
MIG-21 1/13th

Top Nose
Accent
Make 1
MIG-21 1/13th



Cockpit Top View
Make 1
MIG-21 1/13th

Front




Top Fuse Between
Bulkhead 4 & 5
Make 1
MIG-21 1/13th

Bottom Fuse Between
Bulkhead 5 & 6
Make 1
MIG-21 1/13th

Front

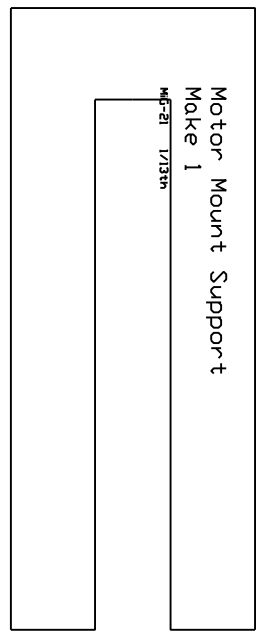

Motor Mount Stick is 130mm long and is 10x10mm hard wood

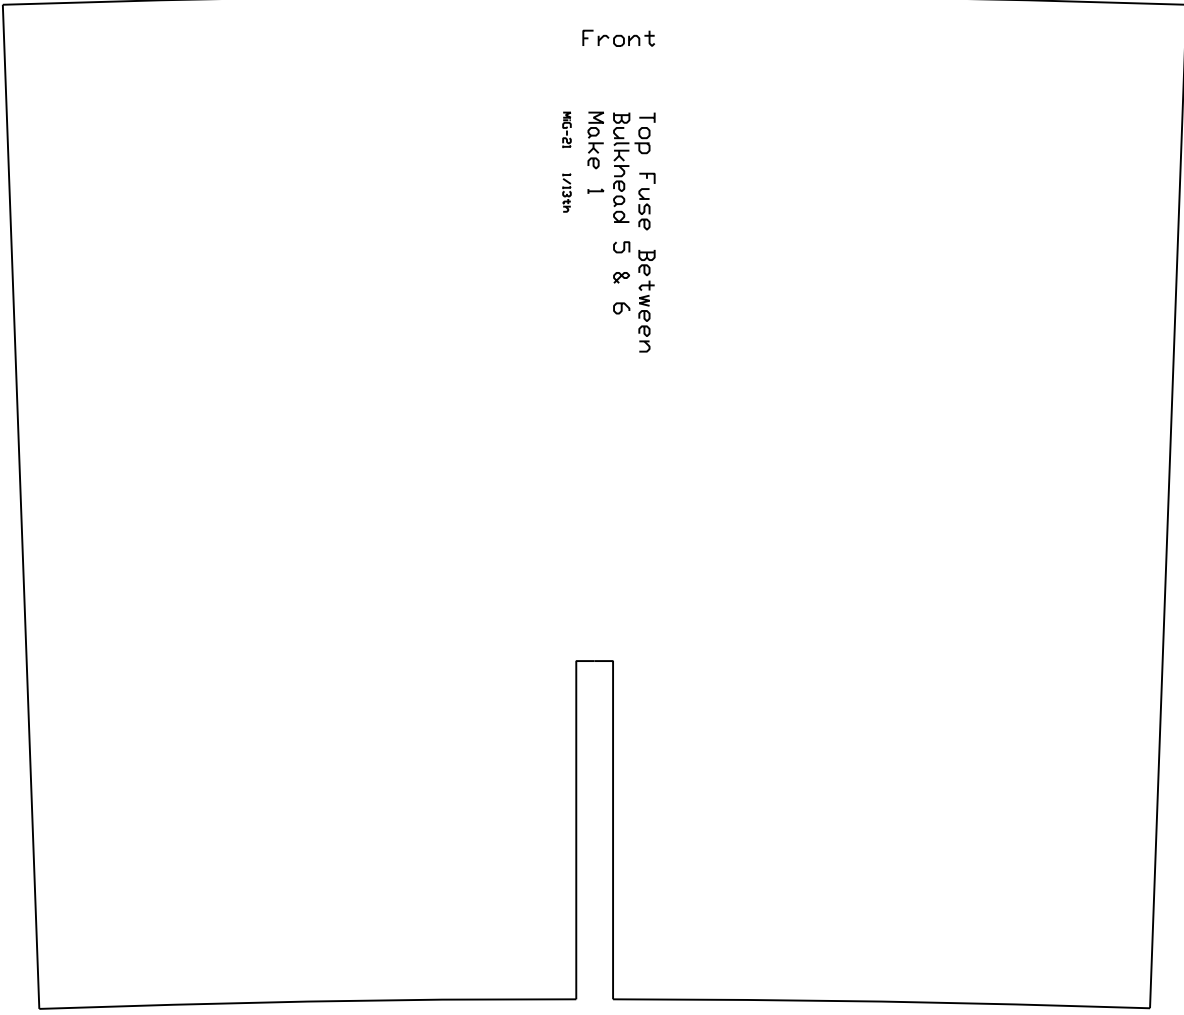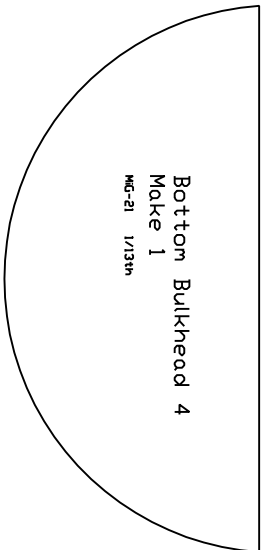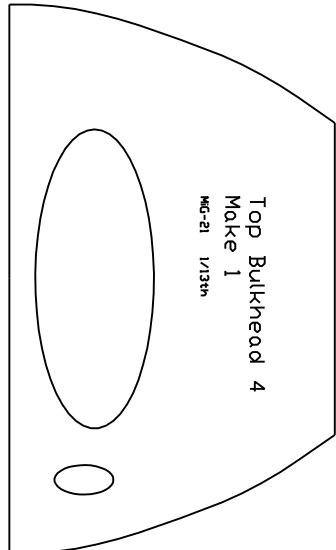

Front

Bottom Fuse Between
Bulkhead 6 & 7
Make 1
MG-21 1/13th

Front

Left Top Fuse Between
Bulkhead 6 & 7
Make 1
MG-21 1/13th

Fin